




HAKKO 802/807/809/ FR-4102


Replacing the Filters

- ① Attach the Spring Filter to the Front Holder / Filter Holder.

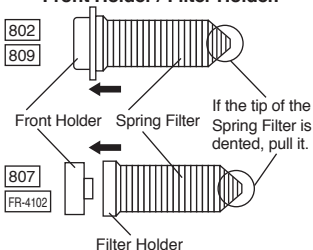


- Securely insert the Spring Filter into the Front Holder/Filter Holder to the end

- ② Attach the Front Holder / Filter Holder to the Filter Pipe.

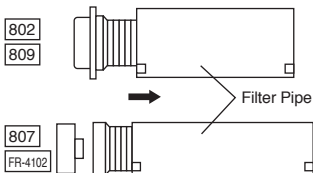

- Attach the Front Holder/Filter Holder to the Filter Pipe. Check to make sure that it doesn't leak.

- ③ Replace the Ceramic Paper Filter.

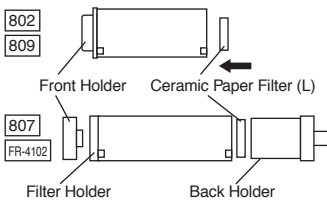

- Insert the Ceramic Paper Filter into the opposite side from the Spring Filter.
- Insert the Back Holder into the Filter Pipe. (807 / FR-4102)

Note

Stretching the Spring Filter or allowing gaps between the coils will reduce the service life and effectiveness of the Filter.

If the Filter displays either of these conditions, replace it with a new one.



MA00875XZ150501

