

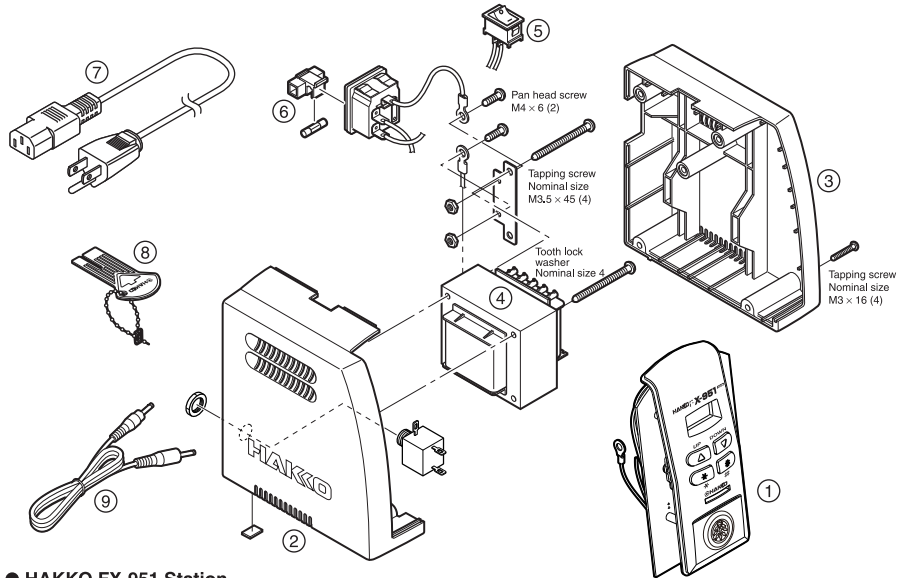


# HAKKO FX-951

High-output, temperature controlled soldering station

## Maintenance & Checking

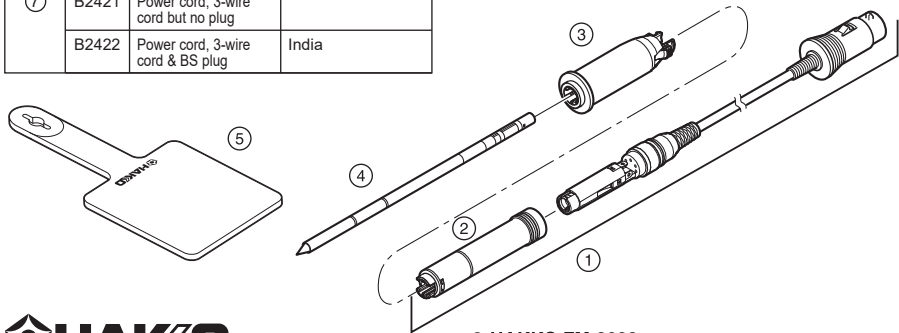
### 1. PARTS LIST



#### ● HAKKO FX-951 Station

Item No.	Part No.	Part Name	Specifications
①	B3732	Front panel assy.	
②	B3255	Case/Left	With rubber feet
③	B2978	Case/Right	With rubber feet
④	B2979	Transformer	100V
	B2983	Transformer	110V
	B2836	Transformer	120V
	B2984	Transformer	220V
	B2985	Transformer	230V
	B3067	Transformer	240V
⑤	B2852	Power switch	
⑥	B2403	Fuse/250V-2A	100-110V
	B3011	Fuse/250V-2A	120V
	B2987	Fuse/250V-1A	220-240V
⑦	B2419	Power cord, 3-wire cord & American plug	120V USA
	B2421	Power cord, 3-wire cord but no plug	
	B2422	Power cord, 3-wire cord & BS plug	India

Item No.	Part No.	Part Name	Specifications
⑦	B2424	Power cord, 3-wire cord & European plug	220V KTL 230V CE
	B2425	Power cord, 3-wire cord & BS plug	230V CE
	B2436	Power cord, 3-wire cord & Chinese plug	China
	B2426	Power cord, 3-wire cord & Australian plug	
	B3508	Power cord, 3-wire cord & American plug	
	B3550	Power cord, 3-wire cord & SI plug	
⑧	B3616	Power cord, 3-wire cord & BR plug	
	B2972	Control card	
	B3253	Connecting cable	



#### ● HAKKO FM-2028

Item No.	Part No.	Part Name	Specifications
①-③	FM2028-01	HAKKO FM-2028	③ is yellow
①-③	FM2028-02	HAKKO FM-2028	③ is blue
①	FM2028-03	Connector assembly	
②	B3220	Connector cover	
③	B3216	Sleeve assembly	Yellow
	B3217	Sleeve assembly	Orange
	B3218	Sleeve assembly	Blue
	B3219	Sleeve assembly	Green
④		Tip	See back page.
⑤	B2300	Heat resistant pad	



### HAKKO CORPORATION HEAD OFFICE

4-5, Shiokusa 2-chome, Naniwa-ku, Osaka 556-0024 JAPAN  
TEL: +81-6-6561-3225 FAX: +81-6-6561-8466  
<https://www.hakko.com.cn> E-mail: [sales@hakko.com](mailto:sales@hakko.com)

#### OVERSEAS AFFILIATES

U.S.A.: AMERICAN HAKKO PRODUCTS, INC.

TEL: (661) 294-0090 FAX: (661) 294-0096

Toll Free (800) 88-HAKKO

<https://www.HakkoUSA.com> E-mail: [Support@HakkoUSA.com](mailto:Support@HakkoUSA.com)

HONG KONG: HAKKO DEVELOPMENT CO., LTD.

TEL: 2811-5588 FAX: 2590-0217

<https://www.hakko.com.cn> E-mail: [info@hakko.com.hk](mailto:info@hakko.com.hk)

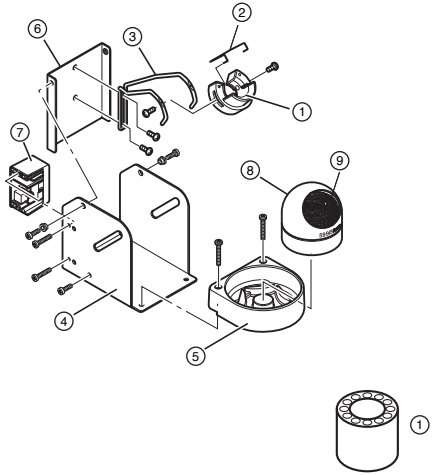
SINGAPORE: HAKKO PRODUCTS PTE., LTD.

TEL: 6748-2277 FAX: 6744-0033

<https://www.hakko.com.sg> E-mail: [sales@hakko.com.sg](mailto:sales@hakko.com.sg)

Please access the web address below for other distributors.

<https://www.hakko.com>



### 2. PARAMETER SETTINGS

The HAKKO FX-951 comes from the factory with the following values preset.

Temperature scale	Celsius
Power save	0 min.
Low temperature alarm setting	150°C
Resetting the supervisor or operator control setting	4 0
Setting temperature	350°C
Buzzer setting (C-E sound, S-E sound)	ON
Buzzer setting (Set temperature alert)	ON

#### ● Entering the parameter

##### 1 °C or °F temperature display

- Turn power OFF.
- Insert the control card into the card slot in the front of the unit.
- Press and hold down the and buttons simultaneously, and then turn power ON.
- Hold and buttons down until the display shows (Celsius) or (Fahrenheit).

When either the display shows either or the station is in parameter input mode.

- Pressing either the and button will cause the display to alternate between or .
- When the desired scale is displayed, select by pressing the button. The system will automatically sequence to power save mode.

##### 2 Power save setting

Set the time from the placement of the soldering iron on the iron holder to the activation of the sleep function.

#### NOTE:

When not using the power save function, do not connect the iron holder and the soldering station with the connecting cable.

#### Power save example:

- 2 0 Sleep (immediately after the soldering iron is placed on the iron holder)
- 210 Sleep (10 minutes after the soldering iron is placed on the iron holder)
- 230 Auto-power shutoff (30 minutes after the soldering iron is placed on the iron holder)

#### NOTE:

The power save time can be set in steps of one minute (30 minutes max.)

- When the sleep function is activated, the temperature of the tip begins to drop.
- When the display shows , pressing any button the power will be turned on again.

#### NOTE:

The sleep function does not work in case the setting temperature is less than 300°C/570°F.

- When the auto-power shutoff function is activated and power to the heater is shut off, the buzzer sounds three times.
- When the display shows , and to begin soldering, cycle the power switch OFF, then ON.

##### 3 Resetting the low temperature alarm tolerance setting

The unique function alerts the operator when the sensed temperature drops below a set limit. Should this occur, an error message will be displayed, and the buzzer will sound continuously. When the temperature returns within the allowable range, the buzzer will stop.

- When the station enters low-temperature alarm tolerance setting mode, the hundreds digit begins flashing. Enter and store the value in the same manner as described in "Changing the temperature setting."
- If you enter a value exceeding the allowable range shown to the left, you will be brought back to entering a value in the hundreds digit. If this occurs, reenter a correct value.
- Once the value is stored, the system will automatically sequence to resetting the supervisor/operator control setting mode.

#### Example:

When the setting temperature is 350°C and the low temperature alarm tolerance is 100°C, buzzer will sound when the tip temperature will drop over 250°C.

##### 4. Resetting the supervisor/operator control setting

To change the supervisor/operator control settings, the procedure is as follows.

- The display will show or when this mode is entered.

: No offset value can be entered without inserting the card.

: An offset value can be entered without inserting the card.

Pressing the or button will change and .

When the desired setting is displayed, select by pressing button.

#### ● Iron Holder

Item No.	Part No.	Part Name	Specifications
①-⑧	FH200-01	Iron holder	

#### ● Iron Holder Parts

Item No.	Part No.	Part Name	Specifications
①	B3001	Iron receptacle	With screws
②	B2791	Tip fixing spring	
③	B3248	Holder for iron receptacle	
④	B3251	Iron holder base	With rubber feet
⑤	B3249	Cleaner base	With rubber feet
⑥	B3250	Stay	
⑦	B3252	Switch case assembly	
⑧	599B-02	Tip cleaner	
⑨	599-029	Cleaning wire	

#### ● Optional Parts

Item No.	Part No.	Part Name	Specifications
①	B2756	Tip tray	

The HAKKO FX-951 has the following six parameters:

- °C or °F temperature display selection
- Power save
- Low temperature alarm setting
- Resetting the supervisor/operator control setting
- Buzzer setting (C-E sound, S-E sound)
- Buzzer setting (Set temperature alert)

Once the station enters parameter mode, set the parameters in the order shown below. After all the parameters have been set, normal operation will be resumed.

#### 5. Buzzer setting (C-E sound, S-E sound)

- In the buzzer sound setting mode, which sets whether to sound the buzzer when a sensor error or soldering iron error occurs, or is displayed.

: The buzzer does not sound.

: The buzzer sound

Select or and press the button.

#### 6. Buzzer setting (Set temperature alert)

- In the buzzer sound setting mode, which sets whether to sound the buzzer when a sensor error or soldering iron error occurs, or is displayed.

: The buzzer does not sound.

: The buzzer sound

Select or and press the button.

The system will exit the parameter setting mode and begin heater control.

It is now ready for normal operation.

### 3. CHECKING PROCEDURE

#### ⚠ WARNING

Unless otherwise directed, carry out these procedures with the power switch OFF and the power UNPLUGGED.

#### ● Check for a broken heater or sensor

- Check for a broken heater or sensor

Measure the resistance across this position.




Verify the electrical integrity of the heater and sensor.

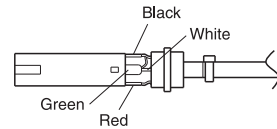
Measure the resistance of the heater and sensor while at room temperature (15 to 25°C.; 59 to 77°F.). It should be 8Ω ±10%. If the resistance exceeds these limits, replace the tip.

- Unplug the connection cord from the station.
- Measure the resistance value between Pin 2 and the tip.
- If the value exceeds 2Ω (at room temperature), perform the tip maintenance described on section 2, maintenance for the tip. If the value still does not decrease, check the connection cord for breakage.

#### ● Check the grounding line



#### ● Checking the connection cord for breakage



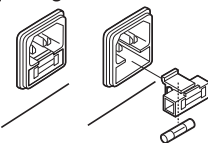
- Remove the soldering tip and the sleeve assembly.
- Turn the front piece of the HAKKO FM-2028 counterclockwise and remove the cover.
- Measure the resistance values between the connector and the lead wires at the socket as follows:

Pin 1 – Red      Pin 2 – Green  
Pin 3 – Black      Pin 5 – White

If any value exceeds 0Ω or is ∞, replace the HAKKO FM-2028.

- Unplug the power cord from the power receptacle.
- Remove the fuse holder.
- Replace the fuse.
- Put the fuse holder back in place.

#### ● Replacing the fuse



### 4. ERROR MESSAGES

#### ● Sensor Error



When there is the possibility that a failure has occurred in the sensor or heater (including the sensor circuit), is displayed and the power is shut down.

#### ⚠ CAUTION

The sensor error also occurs if the tip is not inserted properly.

#### ● Low-temperature alarm tolerance error



If the sensor temperature falls below the difference between the current temperature setting and the low-temperature alarm tolerance, is displayed and the warning buzzer sounds. When the tip temperature rises to a value within the set tolerance, the buzzer will stop sounding.

#### EXAMPLE:

Assume that the temperature setting is 400°C/750°F and the tolerance 50°C/100°F. If the temperature continues to decrease and finally falls below the value indicated below while the heating element is on, the displayed value starts blinking to indicate that the tip temperature has dropped.

will flash, and the buzzer will sound continuously, when the tip is inserted wrong way round, an incompatible tip is inserted, or a foreign object has found its way into the connector.

#### EXAMPLE:

350°C (400°C – 50°C)  
Set temperature – Low-temperature alarm tolerance  
OR  
650°F (750°F – 100°F)  
Set temperature – Low-temperature alarm tolerance

#### ● Heater terminal short-circuit error

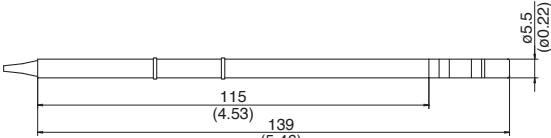

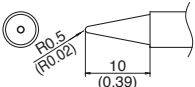
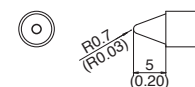
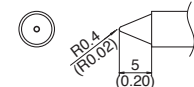
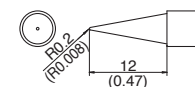
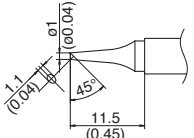
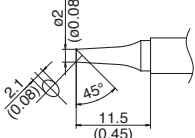
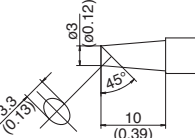
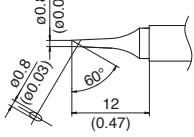
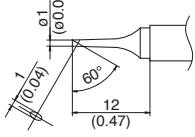
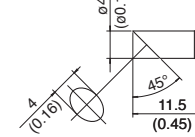
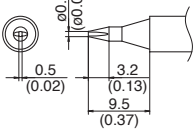
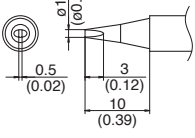
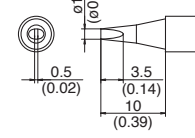
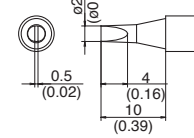
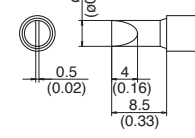
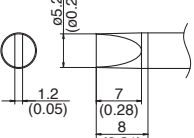
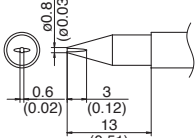
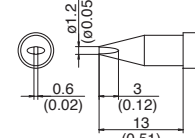
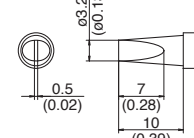
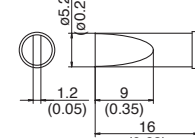

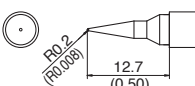
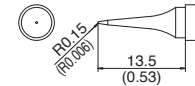
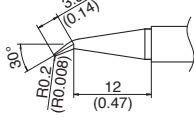
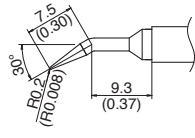
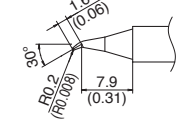
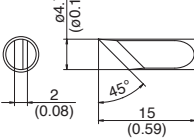
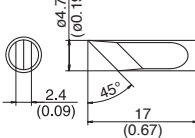
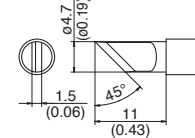
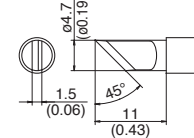
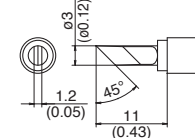
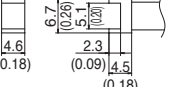
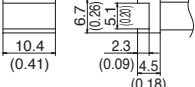
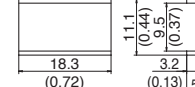
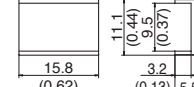
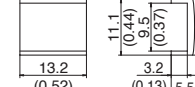
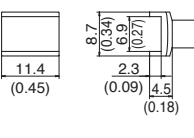
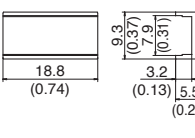
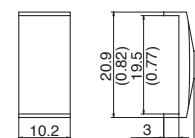
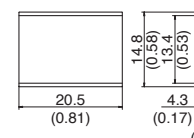
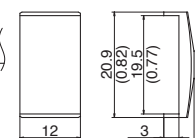


#### ● Soldering iron error

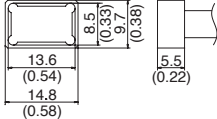
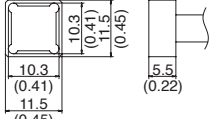
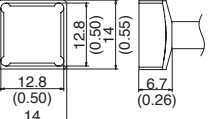
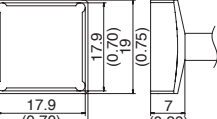
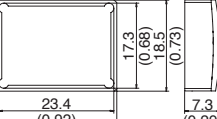


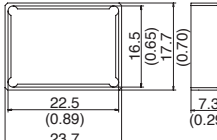
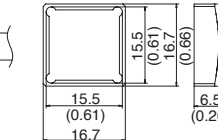
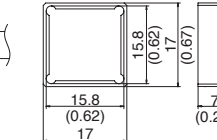
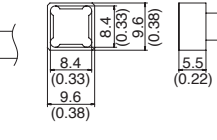
will be displayed if the connector cord is not attached to the station OR the wrong soldering iron is connected.

5. TIP STYLES

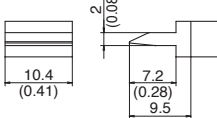
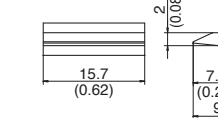
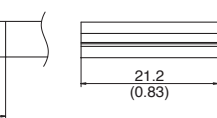
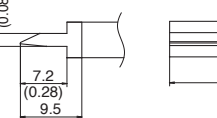
					Unit: mm (in.)
SHAPE B	T12-B SHAPE-B	T12-B2 SHAPE-0.5B	T12-B3 SHAPE-0.7B	T12-B4 SHAPE-0.4B	T12-BL SHAPE-BL
					
SHAPE BC	T12-BC1 SHAPE-1BC T12-BCF1*	T12-BC2 SHAPE-2BC T12-BCF2*	T12-BC3 SHAPE-3BC T12-BCF3*		
					
SHAPE C	T12-C08 SHAPE-0.8C	T12-C1 SHAPE-1C	T12-C4 SHAPE-4C T12-CF4*		
					
SHAPE D	T12-D08 SHAPE-0.8D	T12-D12 SHAPE-1.2D	T12-D16 SHAPE-1.6D	T12-D24 SHAPE-2.4D	T12-D4 SHAPE-4D
					
	T12-D52 SHAPE-5.2D	T12-DL08 SHAPE-0.8DL	T12-DL12 SHAPE-1.2DL	T12-DL32 SHAPE-3.2DL	T12-DL52 SHAPE-5.2DL
					
SHAPE I	T12-I SHAPE-I	T12-IL SHAPE-IL	T12-ILS SHAPE-ILS		
					
SHAPE J	T12-J02 SHAPE-0.2J	T12-JL02 SHAPE-0.2JL	T12-JS02 SHAPE-0.2JS		
					
SHAPE K	T12-K SHAPE-K	T12-KF SHAPE-KF	T12-KL SHAPE-KL	T12-KR SHAPE-KR	T12-KU SHAPE-KU
					
TUNNEL	T12-1001 TUNNEL 5.1 × 4.6	T12-1002 TUNNEL 5.1 × 10.4	T12-1003 TUNNEL 9.5 × 18.3	T12-1004 TUNNEL 9.5 × 15.8	T12-1005 TUNNEL 9.5 × 13.2
					
	T12-1006 TUNNEL 6.9 × 11.4	T12-1007 TUNNEL 7.9 × 18.8	T12-1008 TUNNEL 19.5 × 10.2	T12-1009 TUNNEL 13.4 × 20.5	T12-1010 TUNNEL 19.5 × 12
					

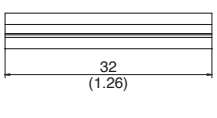
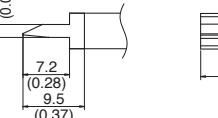
QUAD

T12-1201 QUAD 13.6 × 8.5	T12-1202 QUAD 10.3 × 10.3	T12-1203 QUAD 12.8 × 12.8	T12-1204 QUAD 17.9 × 17.9	T12-1205 QUAD 23.4 × 17.3
				

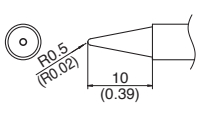
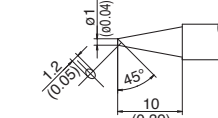
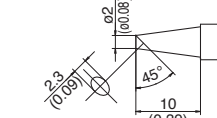
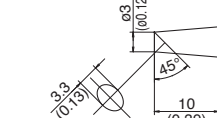
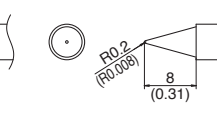
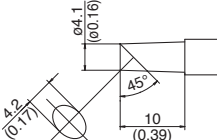
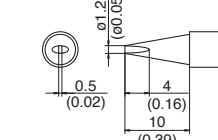
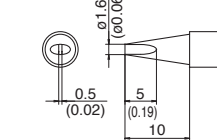
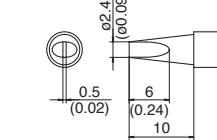
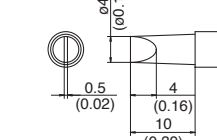
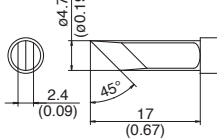
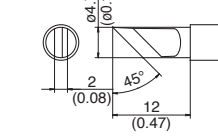
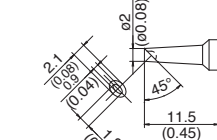
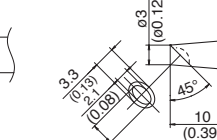
T12-1206 QUAD 22.5 × 16.5	T12-1207 QUAD 15.5 × 15.5	T12-1208 QUAD 15.8 × 15.8	T12-1209 QUAD 8.4 × 8.4
			

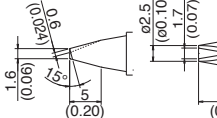
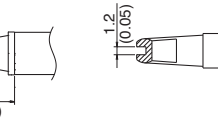
SPATULA

T12-1401 SPATULA 10.4	T12-1402 SPATULA 15.7	T12-1403 SPATULA 21.2	T12-1404 SPATULA 25
			

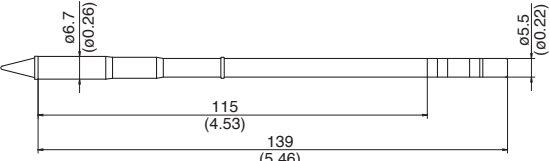
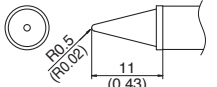
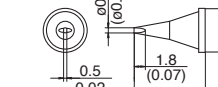
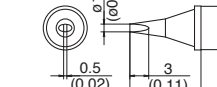
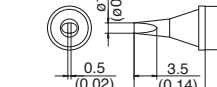
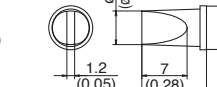
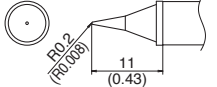
T12-1405 SPATULA 32	T12-1406 SPATULA 40
	

SPECIAL APPLICATIONS TYPE

T12-B2Z SHAPE-0.5B (Z)	T12-BC1Z SHAPE-1BC (Z) T12-BCF1Z*	T12-BC2Z SHAPE-2BC (Z) T12-BCF2Z*	T12-BC3Z SHAPE-3BC (Z) T12-BCF3Z*	T12-BZ SHAPE-B (Z)
				
T12-C4Z SHAPE-4C (Z) T12-CF4Z*	T12-D12Z SHAPE-1.2D (Z)	T12-D16Z SHAPE-1.6D (Z)	T12-D24Z SHAPE-2.4D (Z)	T12-D4Z SHAPE-4D (Z)
				
T12-KFZ SHAPE-KF (Z)	T12-KRZ SHAPE-KR (Z)	T12-BCM2 SHAPE-2BC Bevel with indent**	T12-BCM3 SHAPE-3BC Bevel with indent**	
				

T12-1610	T12-1612
	

HEAVY DUTY TYPE

				
T12-WB2 SHAPE-0.5WB	T12-WD08 SHAPE-0.8WD	T12-WD12 SHAPE-1.2WD	T12-WD16 SHAPE-1.6WD	T12-WD52 SHAPE-5.2WD
				
T12-WI SHAPE-WI				
				

\*Tinned on the soldering surface only.