

ハッコーFM-2025 モデルチェンジのお知らせ

この度、ご愛顧いただいておりますFM-2025 (FX-951, FX-952用こて部) をモデルチェンジし、ロック機能を追加したFM-2028を発売させていただくこととなりました。それに伴い、FX-951・FX-952に付属のこて部も FM-2028に変更いたします。誠に勝手ではございますが、何卒ご理解賜りますようお願い申し上げます。


FM-2028 こて先の交換方法

⚠ 注意

こて先は高温になります。こて先交換時の取扱いには十分ご注意ください。耐熱パッドを使っている場合でも熱いこて先を長時間保持することは避けてください。

● こて先の挿入

- (1) こて先を新スリーブ組品へ挿入する時は、こて先の先端部分を持ち、スリーブ組品へ挿入します。

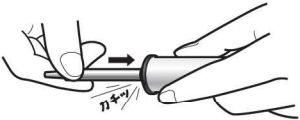

挿入する時はカチッと音が鳴るところまでこて先を押し込んでください。


- (2) スリーブ組品をコネクタ組品へ挿入する時は、ロック部の位置を合わせてコネクタ組品へはめ込みます。



スリーブ組品とコネクタ組品のロック部の位置を合わせてはめてください。


● こて先の取外し

- (1) スリーブ組品を外す時は、スリーブ組品のロック部（両方）を押し込みながらスリーブ組品を外します。

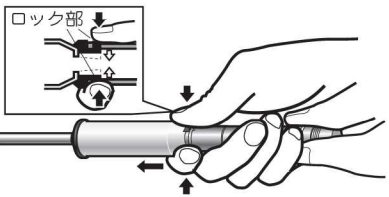


ロック部を押しながらスリーブ組品を外さないと、破損の恐れがあります。

- (2) スリーブ組品からこて先を引き抜く時は、耐熱パッドを用いてこて先を抜いてください。



耐熱パッド

部品リスト

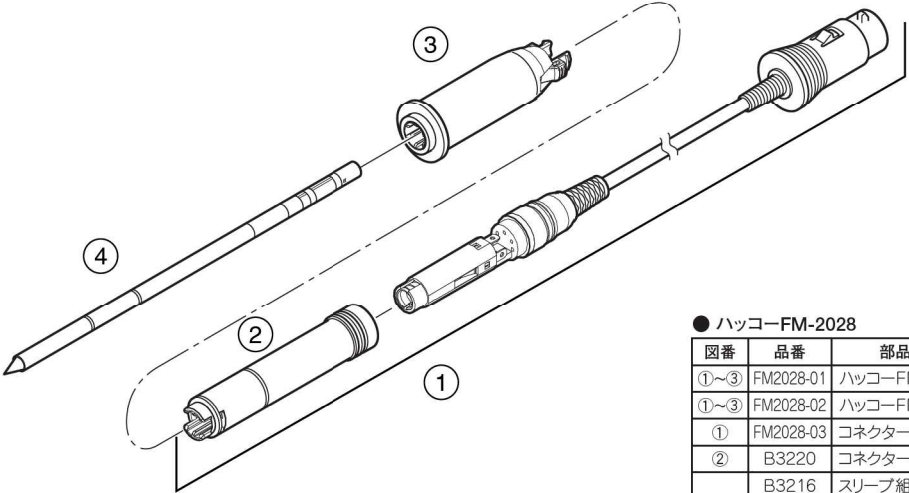

● ハッコーFM-2028

図番	品番	部品名	仕様
①～③	FM2028-01	ハッコーFM-2028	③は黄
①～③	FM2028-02	ハッコーFM-2028	③は青
①	FM2028-03	コネクタ組品	
②	B3220	コネクタカバー	
③	B3216	スリーブ組品	黄
	B3217	スリーブ組品	橙
	B3218	スリーブ組品	青
	B3219	スリーブ組品	緑
④		こて先	保守・点検参照



白光株式会社

<http://www.hakko.com>

〒556-0024 大阪市浪速区塩草2丁目4番5号
TEL: (06) 6561-1574 (代) FAX: (06) 6568-0821



HAKKO CORPORATION

HEAD OFFICE

TEL: +81-6-6561-3225 FAX: +81-6-6561-8466
<http://www.hakko.com> E-mail: sales@hakko.com

OVERSEAS AFFILIATES

U.S.A.: AMERICAN HAKKO PRODUCTS, INC.

TEL: (661) 294-0090 FAX: (661) 294-0096

Toll Free (800)88-HAKKO

<http://www.hakkousa.com>

HONG KONG: HAKKO DEVELOPMENT CO., LTD.

TEL: 2811-5588 FAX: 2590-0217

<http://www.hakko.com.hk>

E-mail: info@hakko.com.hk

SINGAPORE: HAKKO PRODUCTS PTE., LTD.

TEL: 6748-2277 FAX: 6744-0033

<http://www.hakko.com.sg>

E-mail: sales@hakko.com.sg

Please access to the following address for the other Sales affiliates.

<http://www.hakko.com>

Copyright © 2006 HAKKO Corporation. All Rights Reserved.

FM-2025 更改通知

承蒙惠顧FX-951電焊台。
這次將FM-2025(FX-951,FX-952的焊鐵)改良為有鎖定功能的FM-2028。
同時, FX-951, FX-952的附屬焊鐵都改為FM-2028。
感謝您的理解和支持。

FM-2028 焊鐵頭更換方法

⚠ 注意
焊鐵頭高溫會導致灼傷請注意。請勿將抗熱墊片長時間握住焊鐵頭。

● 插入焊鐵頭

(1) 將焊鐵頭插入新套管組件時，請拿著焊鐵頭的前端部分，插入套管組件內。



插入時，請插入焊鐵頭直到聽見“喀噠”聲為止。


(2) 將套管組件插入連接器組件時，請對準鎖定部位置，然後再套進連接器組件內。



請對準套管組件與連接器組件的鎖定部位置，然後再套進。


● 拆下焊鐵頭

(1) 取下套管組件時，請邊按下套管組件鎖定部（上下兩方），邊取下套管組件。

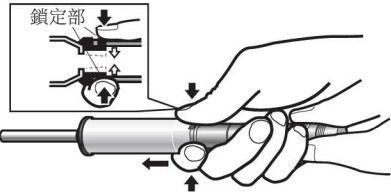


若不邊按下鎖定部而邊取下套管組件的話，恐會造成破損。

(2) 自套管組件拉出焊鐵頭時，請用抗熱墊片拔出焊鐵頭。

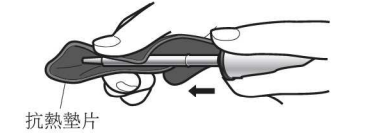

部件清單

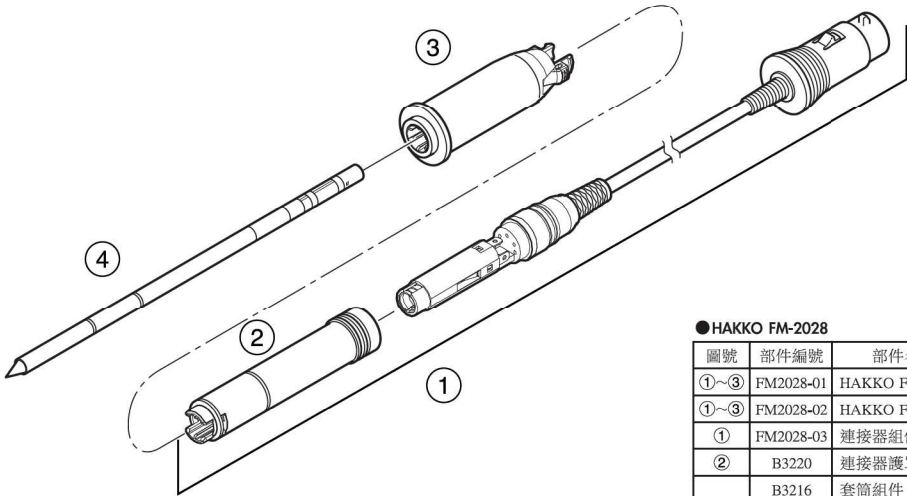

● HAKKO FM-2028			
圖號	部件編號	部件名稱	規格
①~③	FM2028-01	HAKKO FM-2028	③是黃色
①~③	FM2028-02	HAKKO FM-2028	③是藍色
①	FM2028-03	連接器組件	
②	B3220	連接器護罩	
③	B3216	套筒組件	黃
	B3217	套筒組件	橙
	B3218	套筒組件	藍
	B3219	套筒組件	綠
④		焊鐵頭	參照保養・檢查

Information


Thank you for purchasing Hakko FX-951/FX-952 Soldering Station.
We upgraded the hand piece FM-2025 into FM-2028 by adding the lock function.
According to this improvement, the new hand piece FM-2028 is set into the unit.
Your understanding and continuous patronage is appreciated.

FM-2028 Iron Tip Replacement

⚠ CAUTION
The tip can be very HOT. Be carefule in replacing hot tip. Use the heat-resistant pad for handling hot tip, but do not hold the hot tip, even with the pad, for a long time.

● Inserting the tip:

(1) When inserting the tip into a new sleeve assembly, hold the tip by the front end and insert it into the sleeve assembly.

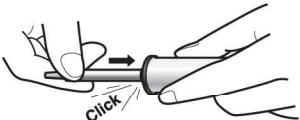

Insert the iron tip until you hear it clicks.


(2) When inserting the sleeve assembly into the connector assembly, align the lock positions and snap the sleeve assembly into the sleeve assembly.



Align the lock positions to snap the sleeve assembly and connector assembly together.


● Removing the tip

(1) To detach the sleeve assembly, press on both locks of the sleeve assembly and pull the sleeve assembly off.

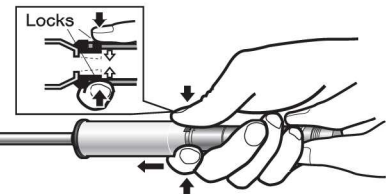


Attempting to pull the sleeve assembly off without pressing on the locks can damage the product.

(2) Use the heat resistant pad to pull the tip from the sleeve assembly.



Parts List

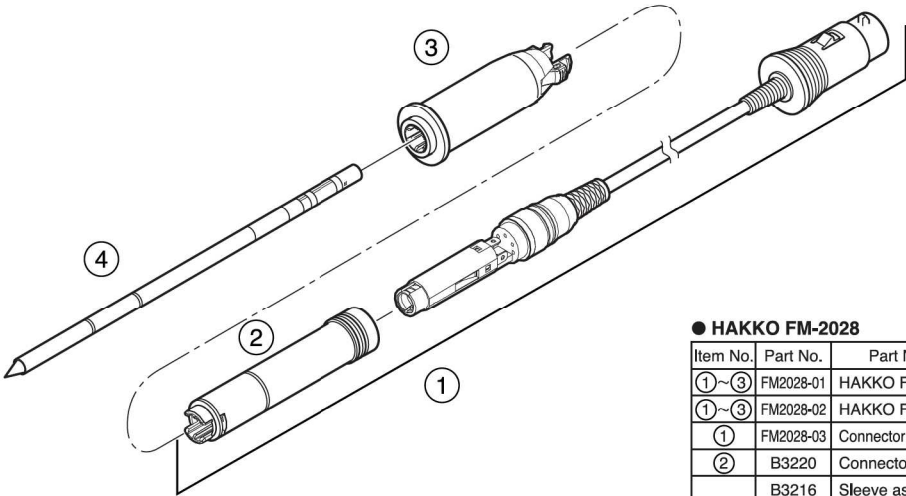

● HAKKO FM-2028			
Item No.	Part No.	Part Name	Specifications
①~③	FM2028-01	HAKKO FM-2028	3 is yellow
①~③	FM2028-02	HAKKO FM-2028	3 is blue
①	FM2028-03	Connector assembly	
②	B3220	Connector cover	
③	B3216	Sleeve assembly	Yellow
	B3217	Sleeve assembly	Orange
	B3218	Sleeve assembly	Blue
	B3219	Sleeve assembly	Green
④		Tip	See Maintenance & Checking