HAKKO

HAKKO FX-951

SOLDERING STATION

High-output, temperature controlled soldering station

Instruction Manual

Thank you for purchasing HAKKO FX-951 soldering station.
Please read this manual before operating the HAKKO FX-951.
Keep this manual readily accessible for reference.


1. PACKING LIST AND PART NAMES

Please check to make sure that all items listed below are included in the package.

HAKKO FX-951 soldering station	1	Heat resistant pad	1
HAKKO FM-2028 soldering iron	1	Iron holder	1
Control card	1	Connecting cable	1
Power cord	1	Instruction manual	1




HAKKO FX-951
Soldering station

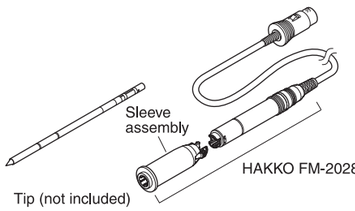




Control card

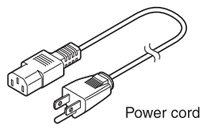


Power cord



Connecting cable



Heat resistant pad

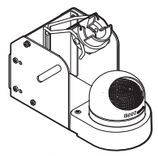

Iron holder

2. SPECIFICATIONS

HAKKO FX-951 soldering station

Power consumption	75 W
Temperature range	200-450°C (400-840°F)
Temperature stability	±5°C (±9°F)

● Station

Output	24 V
Dimensions	80 (W) × 130 (H) × 131 (D) mm
Weight	1.2 kg

● HAKKO FM-2028 soldering iron

Power consumption	70 W (24 V)
Tip to ground resistance	< 2 Ω
Tip to ground potential	< 2 mV
Length of cord	1.2 m (4 ft.)
Length, (w/o cord)	188 mm (7.4 in.) with 2.4D tip
Weight, (w/o cord)	30 g (0.07 lb.) with 2.4D tip

NOTE:
The temperature was measured using the HAKKO 191 or FG-100 thermometer.
This product is protected against electrostatic discharge.

⚠ CAUTION
This product includes such features as electrically conductive plastic parts and grounding of the handpiece and station as measures to protect the device to be soldered from the effects of static electricity. Be sure to observe the following instructions:
1. The handle and other plastic parts are not insulators, they are conductors. When replacing parts or repairing, take sufficient care not to expose live electrical parts or damage insulation materials.
2. Be sure to ground the unit during use.

Specifications and design are subject to change without notice.

中國RoHS: 產品中有毒有害物質或元素的名稱及含量

部件名稱	有毒有害物質或元素					
	鉛(Pb)	汞(Hg)	鎘(Cd)	六價鉻 (Cr(VI))	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)
焊鐵部	×	○	○	○	○	○
焊鐵座	×	○	○	○	○	○
插頭	×	○	○	○	○	○
插座	×	○	○	○	○	○
電路板	×	○	○	○	○	○

○： 表示該有毒有害物質在該部件所有均質材料中的含量均在SJ/T 11363-2006 標準規定的限量要求以下。
×： 表示該有毒有害物質至少在該部件的某一均質材料中的含量超出SJ/T 11363-2006 標準規定的限量要求。

HAKKO

HAKKO CORPORATION
HEAD OFFICE
TEL:+81-6-6561-3225 FAX:+81-6-6561-8466
http://www.hakko.com E-mail:sales@hakko.com
OVERSEAS AFFILIATES
U.S.A.: AMERICAN HAKKO PRODUCTS, INC.
TEL: (661) 294-0090 FAX: (661) 294-0096
Toll Free (800)88-HAKKO
http://www.hakkousa.com
HONG KONG: HAKKO DEVELOPMENT CO., LTD.
TEL: 2811-5588 FAX: 2590-0217
http://www.hakko.com.hk
E-mail:info@hakko.com.hk
SINGAPORE: HAKKO PRODUCTS PTE., LTD.
TEL: 6748-2277 FAX: 6744-0033
http://www.hakko.com.sg
E-mail:sales@hakko.com.sg

Please access to the following address for the other Sales affiliates.
http://www.hakko.com

2010.5
MA01472XZ100528

Copyright © 2010 HAKKO Corporation. All Rights Reserved.

3. WARNINGS, CAUTIONS AND NOTES

⚠ WARNING

Warnings, cautions and notes are placed at critical points in this manual to direct the operator's attention to significant items. They are defined as follows:

⚠ **WARNING:** Failure to comply with a WARNING may result in serious injury or death.
⚠ **CAUTION :** Failure to comply with a CAUTION may result in injury to the operator, or damage to the items involved. Two examples are given below.
NOTE : A NOTE indicates a procedure or point that is important to the process being described.
EXAMPLE: An EXAMPLE is given to demonstrate a particular procedure point or process.

⚠ CAUTION

When power is ON, tip temperatures will be between 200°C and 450°C. (392°F to 840°F.) To avoid injury or damage to personal and items in the work area, observe the following:
- Do not touch the tip or the metal parts near the tip.
- Do not allow the tip to come close to, or touch, flammable materials.
- Inform others in the area that the unit is hot and should not be touched.
- Turn the power off when not in use, or left unattended.
- Turn the power off when changing parts or storing the HAKKO FX-951.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.


To prevent accidents or damage to the HAKKO FX-951, be sure to observe the following:

- Do not use the HAKKO FX-951 for applications other than soldering.
- Do not allow the HAKKO FX-951 to become wet, or use it when hands are wet.
- Do not modify the HAKKO FX-951.
- Use only genuine HAKKO replacement parts.
- Do not bend or damage the control card. If the card does become damaged, do not force the card into the station slot.
- Do not strike the iron against hard objects to remove excess solder. This will damage the iron.
- Be sure the work area is well ventilated. Soldering produces smoke.
- While using HAKKO FX-951, don't do anything which may cause bodily harm or physical damage.

4. INITIAL SETUP

A. Iron holder


● Loosen the adjusting screws to change the angle of the iron receptacle as you like, then tighten the screws.

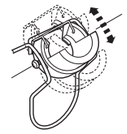

⚠ CAUTION
Do not set up the iron receptacle too high, the temperature of the soldering iron will become very hot.


⚠ CAUTION
Do not lay down the iron receptacle too much, it can be easy to fall down.

● Put the tip cleaner (599B) in the cleaner base.

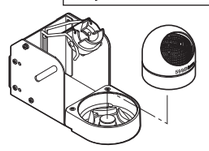


● Use of the sleep function
When using the sleep function, insert one end of the connecting cable into the jack at the back of the iron holder and the other end into the jack at the back of the soldering station to connect them.

⚠ CAUTION
Be sure to turn off the power before connecting or disconnecting the connecting cable.

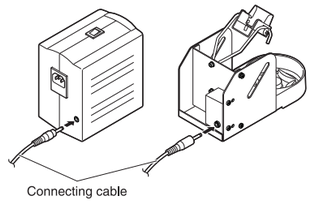

B. Handpiece cord assembly
Pass the iron cord through the hole in the heat resistant pad.




C. Soldering station

⚠ CAUTION
Be sure the power switch is OFF before connecting or disconnecting the soldering iron cord. Failure to do so may result in damage to the circuit board.

1. Insert the power cord into the receptacle at the back of the station.
   Insert the soldering iron cord into the receptacle at the front of the station.
2. Set the iron in the iron holder.
3. Plug the power cord into a grounded wall socket.


⚠ CAUTION
The HAKKO FX-951 is protected against electrostatic discharge and must be grounded for full efficiency.

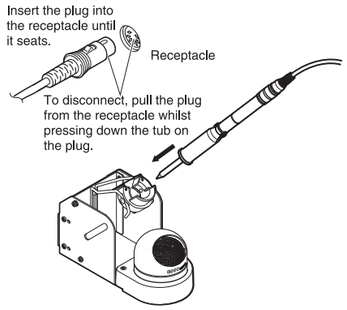

5. OPERATION

Controls and displays

Controls

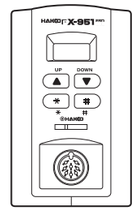

The front panel of the HAKKO FX-951 soldering station has the following controls:
- Four control buttons:

(#) – Initiates a data entry mode.
(*) – End of sequence signal (terminates a phase of a data entry mode); when pressed for less than one second, displays settings already stored.
(▲) – Increases the value in the appropriate display window.
(▼) – Decreases the value in the appropriate display window.

Displays

The HAKKO FX-951 has a three-digit display element. Depending upon the selected mode, it will display:
- Normal mode:
  Sensor temperature (tip temperature)
- Data entry:
  Selected quantity (See 'data entry procedures' for exact characteristics.)
- Temperature scale:
  °C or °F, depending upon selection
- Error detection:
  Refer to 'ERROR MESSAGES' section.

In addition, heater lamps will flash when the station has reached the desired temperature, indicating that it is ready for use.
An audible buzzer is provided to alert the operator when:
- The station has reached the set temperature. The buzzer will sound once.
- When the low temperature threshold has been crossed, the buzzer will sound continuously. This buzzer will shutoff when the sensed temperature returns to the acceptable range.
- When a foreign substance, an incompatible tip, or the soldering end of the tip is inserted into the HAKKO FM-2028, the display will blink and the buzzer will sound continuously.
- When the error occurs with the HAKKO FM-2028, the buzzer will sound continuously.

NOTE:
The buzzer that sounds when the unit reaches the desired temperature, or when C-E or S-E is displayed, can be switched on or off via the parameter settings.

● Operation

1. Turn the power switch ON.
2. Once the temperature is reached, the buzzer sounds. The heater lamp at the lower right of the temperature display 350 starts blinking.


⚠ CAUTION
The HAKKO FX-951 is preset at 350°C at the factory. Check the temperature setting by pressing the (*) button. The set temperature will be displayed for two seconds.

⚠ CAUTION
Place the iron in the iron holder when not in use.

● Setting/changing the temperature

Example: 350°C to 400°C

1. **Insert the control card into the slot in the front of the unit.**
   - The hundreds digit will begin to flash, indicating that the unit is in the TEMPERATURE SET mode and data may be entered.
2. **Entering the hundreds digit**
   - Press the (▲) or (▼) button to set the desired figure. Only 2, 3, or 4 can be selected. (In °F mode, 4, 5, 6, 7, or 8 can be selected). When the desired figure is displayed, press the (*) button to enter. The tens digit will begin to flash.
3. **Entering the tens digit**
   - Press the (▲) or (▼) button to set the desired figure. Any value from 0 to 9 can be selected. (In °F mode, the same value can be selected.) When the desired figure is displayed, press the (*) button to enter. The units digit will begin to flash.
4. **Entering the units digit**
   - Press the (▲) or (▼) button to set the desired figure. Any value from 0 to 9 can be selected. (In °F mode, the same value can be selected.) When the desired figure is displayed, press the (*) button to enter. The desired temperature is now entered into the system memory and heater control will begin.

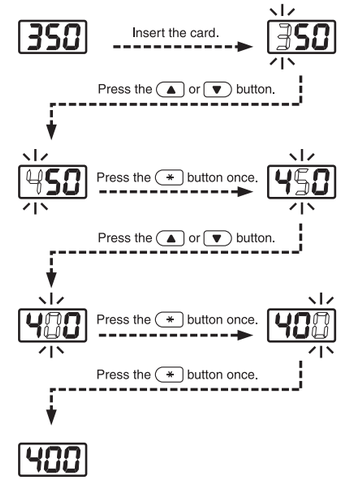

NOTE:
If power is switched off or lost during the execution of this procedure, no data will be entered. The entire procedure must be repeated from step 1.

When the station is ON and the card is in the station, the data entry procedure follows:

1. Hold the (*) button down for at least one second. The current temperature setting will be displayed, then the hundreds digit will begin to flash. This indicates that the station has entered the temperature setting mode.
   Continue with the procedure of 2 - 4, above.
2. When the (*) button is pressed for less than one second, the current temperature setting is displayed for two seconds, then returns to show the actual tip temperatures.

5. OPERATION


● **Replacing the tip**


⚠ CAUTION
The tip may be hot. Avoid holding the hot tip for a long time even if using the heat-resistant pad. Otherwise burns may result.

Removing the tip:
- Hold down the lock release buttons in the sleeve assembly, pull out the tip together with the sleeve assembly from the connector.

⚠ CAUTION
- Be sure to keep the lock release buttons hold down while pulling out the sleeve assembly. Failure to do so will damage the locking mechanism.
- Be sure to pull out the tip only after separating the sleeve assembly from the connector. Otherwise, the sleeve assembly may fall down and break.


- Holding the front end of the sleeve assembly, pull out the tip.


Remove the tip from the connector while pressing this part.


Hold the front part of the sleeve assembly to remove the tip.

Inserting the tip:
Holding the front end of the tip, insert it into the sleeve assembly.


⚠ CAUTION
Insert the tip into the sleeve assembly until it clicks into place. When you hear it clicks, avoid forcing the tip into the sleeve assembly.


Hold this part to insert the tip into the sleeve assembly.

⚠ CAUTION
When holding the head of the tip, there is a danger of burn. Be sure to use the heat-resistant pad.

- Insert the tip securely into the connector.

NOTE:
Improper insertion of the tip will cause 5-E to appear on the display.


Hold this part to insert the tip into the connector.

● **How to enter the tip offset value into the HAKKO FX-951**

Example 1;
If the measured temperature is 410°C and the set temperature is 400°C, the difference is -10°C (need to decrease by 10°C). So, enter the figure which 10 is deducted from present offset value.

1. Insert the control card into the slot in the station.
- The station is in the temperature setting mode. The hundreds digit will begin to flash.

2. Press the ⌗ button on the front panel.
- This will set the station to offset value entry mode.


3. Enter the offset value
The allowable ranges for offset values are from -50 to +50°C (In °F mode from -90 to +90°F).

NOTE:
During offset data entry mode with blinking, the tip temperature is controlled by present offset value.

a. Entering the hundreds digit
- Press the ▲ or ▼ button to set the desired figure. Only 0 (plus) or - (minus) can be selected. (In °F mode, it is the same as °C mode). When the 0 (plus) or - (minus) is selected, press the ✱ button to enter. The tens digit will begin to flash.

b. Entering the tens digit
- Press the ▲ or ▼ button to set the desired figure. Any value from 0 to 5 (In °F mode, 0 to 9) can be selected. When the desired figure is displayed, press the ✱ button to enter. The units digit will begin to flash.

c. Entering the units digit
- Press the ▲ or ▼ button to set the desired figure. Any value from 0 to 9 (In °F mode, same value can be selected.) When the desired figure is displayed, press the ✱ button to enter. The desired temperature is now entered into the system memory and heater control will begin with new offset value.

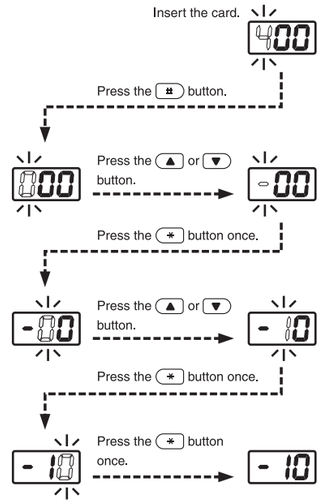

NOTE:
When the unit is in offset-free mode, you can go into the offset value entry mode without control card by pressing the ⌗ button for second.

When the station is ON and the card is in the station, the offset entry procedure follows:

1. Hold the ⌗ button down for at least one second. The current offset value will be displayed, then the hundreds digit will begin to flash. This indicates that the station has entered the offset value input mode. Continue with the procedure of a - c, above.

2. When the ⌗ button is pressed for less than one second, the current offset value is displayed for two seconds, then returns to tip temperature.

6. PARAMETER SETTINGS

The HAKKO FX-951 comes from the factory with the following values preset.

Temperature scale	Celsius
Power save	0 min.
Low temperature alarm setting	150°C
Resetting the supervisor or operator control setting	4 0
Setting temperature	350°C
Buzzer setting (C-E sound, S-E sound)	ON
Buzzer setting (Set temperature alert)	ON

● **Entering the parameter**

1 °C or °F temperature display

2 Power save setting
Set the time from the placement of the soldering iron on the iron holder to the activation of the sleep function.

NOTE:
When not using the power save function, do not connect the iron holder and the soldering station with the connecting cable.

Power save example:
2 0 Sleep (immediately after the soldering iron is placed on the iron holder)
210 Sleep (10 minutes after the soldering iron is placed on the iron holder)
230 Auto-power shutoff (30 minutes after the soldering iron is placed on the iron holder)

NOTE:
The power save time can be set in steps of one minute (30 minutes max.)

- When the sleep function is activated, the temperature of the tip begins to drop.
- When the display shows SLP, pressing any button the power will be turned on again.

NOTE:
The sleep function does not work in case the setting temperature is less than 300°C/570°F.

- When the auto-power shutoff function is activated and power to the heater is shut off, the buzzer sounds three times.
- When the display shows - - -, and to begin soldering, cycle the power switch OFF, then ON.

3 Resetting the low temperature alarm tolerance setting
The unique function alerts the operator when the sensed temperature drops below a set limit. Should this occur, an error message will be displayed, and the buzzer will sound continuously. When the temperature returns within the allowable range, the buzzer will stop.

Range of allowable low temperature alarm tolerance
for °C: 30 - 150°C
for °F: 60 - 300°F

Example:
When the setting temperature is 350°C and the low temperature alarm tolerance is 100°C, buzzer will sound when the tip temperature will drop over 250°C.

4 Resetting the supervisor/operator control setting


The HAKKO FX-951 has the following six parameters:

1) °C or °F temperature display selection
2) Power save
3) Low temperature alarm setting
4) Resetting the supervisor/operator control setting
5) Buzzer setting (C-E sound, S-E sound)
6) Buzzer setting (Set temperature alert)

Once the station enters parameter mode, set the parameters in the order shown below. After all the parameters have been set, normal operation will be resumed.

1. Turn power OFF.
2. Insert the control card into the card slot in the front of the unit.
3. Press and hold down the ▲ and ▼ buttons simultaneously, and then turn power ON.
4. Hold ▲ and ▼ buttons down until the display shows 1 C (Celsius) or 1 F (Fahrenheit).
   When either the display shows either 1 C or , 1 F the station is in parameter input mode.
- Pressing either the ▲ and ▼ button will cause the display to alternate between 1 C or 1 F.
- When the desired scale is displayed, select by pressing the ✱ button. The system will automatically sequence to power save mode.

When the station enters the parameter input mode, the procedure is as follows.

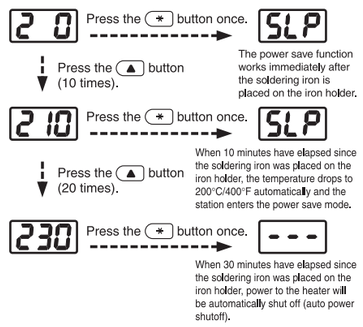

- When the station enters low-temperature alarm tolerance setting mode, the hundreds digit begins flashing. Enter and store the value in the same manner as described in "Changing the temperature setting."
- If you enter a value exceeding the allowable range shown to the left, you will be brought back to entering a value in the hundreds digit. If this occurs, reenter a correct value.
- Once the value is stored, the system will automatically sequence to resetting the supervisor/operator control setting mode.

To change the supervisor/operator control settings, the procedure is as follows.
- The display will show 4 0 or 4 1 when this mode is entered.

4 0 : No offset value can be entered without inserting the card.
4 1 : An offset value can be entered without inserting the card.

Pressing the ▲ or ▼ button will change 4 0 and 4 1.
When the desired setting is displayed, select by pressing ✱ button.

5 Buzzer setting (C-E sound, S-E sound)

- In the buzzer sound setting mode, which sets whether to sound the buzzer when a sensor error or soldering iron error occurs, either 5 0 or 5 1 is displayed.

5 0 : The buzzer does not sound.

5 1 : The buzzer sounds.

Select ▲ or ▼ and press the ✱ button.

6 Buzzer setting (Set temperature alert)

- In the set temperature alert setting mode, either 6 0 or 6 1 is displayd.

6 0 : The buzzer does not sound.

6 1 : The buzzer sounds.

Select ▲ or ▼ and press the ✱ button.
The system will exit the parameter setting mode and begin heater control.
It is now ready for normal operation.

7. ERROR MESSAGES

● **Sensor Error**



When there is the possibility that a failure has occurred in the sensor or heater (including the sensor circuit), 5-E is displayed and the power is shut down.

⚠ CAUTION
The sensor error also occurs if the tip is not inserted properly.

● **Low-temperature alarm tolerance error**



If the sensor temperature falls below the difference between the current temperature setting and the low-temperature alarm tolerance, H-E is displayed and the warning buzzer sounds. When the tip temperature rises to a value within the set tolerance, the buzzer will stop sounding.

EXAMPLE:
Assume that the temperature setting is 400°C/750°F and the tolerance 50°C/100°F. If the temperature continues to decrease and finally falls below the value indicated below while the heating element is on, the displayed value starts blinking to indicate that the tip temperature has dropped.

EXAMPLE:

350°C (400°C – 50°C)
Set temperature — Low-temperature alarm tolerance

OR

650°F (750°F – 100°F)
Set temperature — Low-temperature alarm tolerance

● **Heater terminal short-circuit error**



H5E will flash, and the buzzer will sound continuously, when the tip is inserted wrong way round, an incompatible tip is inserted, or a foreign object has found its way into the connector.

● **Soldering iron error**



C-E will be displayed if the connector cord is not attached to the station OR the wrong soldering iron is connected.

※各言語（日本語、英語、中国語、フランス語、ドイツ語、韓国語）の取扱説明書は以下のURL、HAKKO Document Portalからダウンロードしてご覧いただけます。
（商品によっては設定の無い言語がありますが、ご了承ください）
＊各國語言(日語,英語,中文,法語,德語,韓語)的使用説明書可以通過以下网站的HAKKO Document Portal 下載參閱。
(有一部分的產品沒有設定外語對應,請見諒)
* Instruction manual for the language, Japanese, English, Chinese, French, German and Korean can be downloaded from the following URL, HAKKO Document Portal.
(Please note that some language may not be available depending on the product.)

https://doc.hakko.com