

No.A1510

ヒーター (No.251-01用)

Heating element (For No.251-01)

發熱元件(供No.251-01用)

取扱説明書/Instruction Manual/使用説明書

△注意/CAUTION/注意


- ヒーター線の交換は必ず電池を抜いてください。
 1.残ったヒーター線をすべて取り除きます。
 2.ヒーター線を図のようにアームの溝とフックにかけてください。そのままでは届かないので、アームを軽く押さえてください。この時ヒーター線によじれや折り曲がりがないようにしてください。

When replacing the heating element, be sure to remove the batteries from the unit.

1. Remove the heating element from the unit completely.
2. Hang the heating element to the groove of the arm and the hook as shown in the drawing. Press the arm lightly to set the heating element. Be careful not to twist or bend the heating element.

更換發熱元件時，必定要拆下電池後才進行。

1. 將舊的發熱元件全部拆下。
2. 發熱元件如圖安裝好。輕輕地按下桿子，此時請注意切勿讓發熱元件扭動或折斷，彎曲。

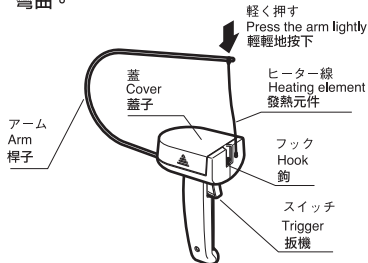

5本入り/Set of 5 /5個一套

白光株式会社

<https://www.hakko.com>

〒556-0024 大阪市浪速区塩草2丁目4番5号
 TEL: (06) 6561-1574 (代) FAX: (06) 6568-0821

HAKKO CORPORATION

HEAD OFFICE

4-5, Shiookusa 2-chome, Naniwa-ku, Osaka 556-0024 JAPAN
 TEL: +81-6-6561-3225 FAX: +81-6-6561-8466
<https://www.hakko.com> E-mail: sales@hakko.com

OVERSEAS AFFILIATES

U.S.A.: AMERICAN HAKKO PRODUCTS, INC.

TEL: (661) 294-0090 FAX: (661) 294-0096
 Toll Free (800) 88-HAKKO
<https://www.HakkoUSA.com> E-mail: Support@HakkoUSA.com

HONG KONG: HAKKO DEVELOPMENT CO., LTD.

TEL: 2811-5588 FAX: 2590-0217
<https://www.hakko.com.cn> E-mail: info@hakko.com.hk

SINGAPORE: HAKKO PRODUCTS PTE., LTD.

TEL: 6748-2277 FAX: 6744-0033
<https://www.hakko.com.sg> E-mail: sales@hakko.com.sg

Please access the web address below for other distributors.

<https://www.hakko.com>

HAKKOは白光株式会社の登録商標です。

© 2004-2020 HAKKO Corporation. All Rights Reserved.



2020.8

MA01303XZ200803



MADE IN MALAYSIA