

No. BX1000

はんだ送りプリーユニット / 0.3mm
送錫滑輪装置 / 0.3mm
Solder feed pulley unit / 0.3mm

はんだのセット方法
錫線の設置方法
How to set solder

①はんだ送りプリーユニットをフィーダーユニットに取り付けます。


將送錫滑輪裝置安裝於送錫裝置上。

Attach the solder feed pulley unit to the feeder unit.

②はんだを挿入し、下図のように送り出します。

插入錫線，如下圖所示將錫線送出。

Insert and feed the solder as shown in the following figure.

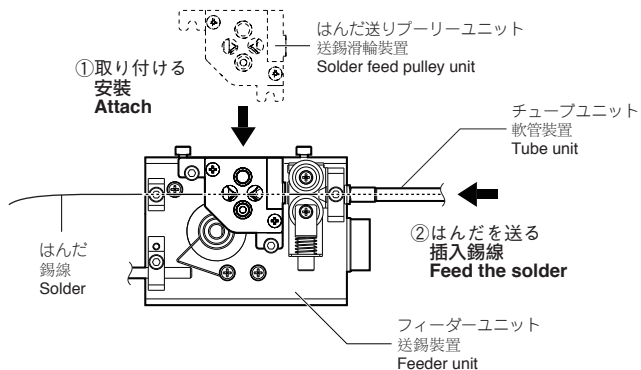

③供給ノズルにはんだを通し、はんだ送りプリーユニットに差し込みます。


將銲錫穿過供應導咀，插入送錫滑輪裝置。

Pass the solder through the supply nozzle and insert it into the solder feed pulley unit.

④はんだ送りガイドセットをフィーダーユニットに取り付けます。

將送錫引導管組合安裝在送錫裝置上。

Attach the solder feed guide set to the feeder unit.

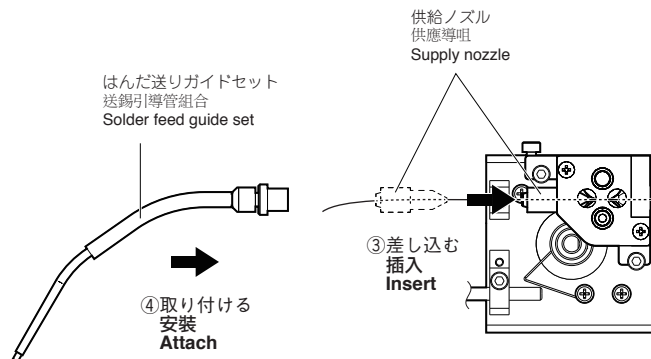

白光株式会社
https://www.hakko.com
〒556-0024 大阪市浪速区堀草2丁目4番5号
TEL: (06) 6561-1574 (代) FAX: (06) 6568-0821



HAKKO CORPORATION
HEAD OFFICE
4-5, Shioikusa 2-chome, Naniwa-ku, Osaka 556-0024 JAPAN
TEL: +81-6-6561-3225 FAX: +81-6-6561-8466
https://www.hakko.com E-mail: sales@hakko.com

OVERSEAS AFFILIATES
U.S.A.: AMERICAN HAKKO PRODUCTS, INC.
TEL: (661) 294-0090 FAX: (661) 294-0096
Toll Free (800) 88-HAKKO
https://www.hakkoUSA.com E-mail: Support@HakkoUSA.com
HONG KONG: HAKKO DEVELOPMENT CO., LTD.
TEL: 2811-5588 FAX: 2590-0217
https://www.hakko.com.cn E-mail: info@hakko.com.hk
SINGAPORE: HAKKO PRODUCTS PTE., LTD.
TEL: 6748-2277 FAX: 6744-0033
https://www.hakko.com.sg E-mail: sales@hakko.com.sg

Please access the web address below for other distributors.
https://www.hakko.com