




702B、850B、852、FR-801、FR-802、FR-803、  
FR-803B、オプションノズル

#### 使用上のご注意

- ・702B、850B、FR-801、FR-802に使用する場合  
ノズルの内側にねじ(M3 x 5)がついている場合は、  
ねじを外さないでください。下図参照
- ・852、FR-803、FR-803Bに使用する場合  
ノズルの内側にねじ(M3 x 5)がついている場合は、  
ねじを外してください。
- ・シングルノズルと内側にねじ(M3 x 5)がついていないノズルは  
パッドは使用できません。
- ・BGA用ノズルはパッドは使用できます。



702B、850B、852、FR-801、FR-802、FR-803、FR-803B  
另購噴嘴

#### 使用上の注意

- ・與702B、850B、FR-801、FR-802使用時  
如果噴嘴內側有螺釘(M3 x 5)，請勿取下此螺釘。  
參照上圖
- ・與852B、FR-803、FR-803B使用時  
如果噴嘴內側有螺釘(M3 x 5)，請取下此螺釘。
- ・單獨式噴嘴及沒有內側螺釘的噴嘴不能使用吸墊。
- ・BGA噴嘴可以使用吸墊。


2022.2  
MA01400XZ220221



702B、850B、852、FR-801、FR-802、FR-803、  
FR-803B、オプションノズル

#### 使用上のご注意

- ・702B、850B、FR-801、FR-802に使用する場合  
ノズルの内側にねじ(M3 x 5)がついている場合は、  
ねじを外さないでください。下図参照
- ・852、FR-803、FR-803Bに使用する場合  
ノズルの内側にねじ(M3 x 5)がついている場合は、  
ねじを外してください。
- ・シングルノズルと内側にねじ(M3 x 5)がついていないノズルは  
パッドは使用できません。
- ・BGA用ノズルはパッドは使用できます。



702B、850B、852、FR-801、FR-802、FR-803、FR-803B  
另購噴嘴

#### 使用上の注意

- ・與702B、850B、FR-801、FR-802使用時  
如果噴嘴內側有螺釘(M3 x 5)，請勿取下此螺釘。  
參照上圖
- ・與852B、FR-803、FR-803B使用時  
如果噴嘴內側有螺釘(M3 x 5)，請取下此螺釘。
- ・單獨式噴嘴及沒有內側螺釘的噴嘴不能使用吸墊。
- ・BGA噴嘴可以使用吸墊。


2022.2  
MA01400XZ220221



702B、850B、852、FR-801、FR-802、FR-803、  
FR-803B、オプションノズル

#### 使用上のご注意

- ・702B、850B、FR-801、FR-802に使用する場合  
ノズルの内側にねじ(M3 x 5)がついている場合は、  
ねじを外さないでください。下図参照
- ・852、FR-803、FR-803Bに使用する場合  
ノズルの内側にねじ(M3 x 5)がついている場合は、  
ねじを外してください。
- ・シングルノズルと内側にねじ(M3 x 5)がついていないノズルは  
パッドは使用できません。
- ・BGA用ノズルはパッドは使用できます。



702B、850B、852、FR-801、FR-802、FR-803、FR-803B  
另購噴嘴

#### 使用上の注意

- ・與702B、850B、FR-801、FR-802使用時  
如果噴嘴內側有螺釘(M3 x 5)，請勿取下此螺釘。  
參照上圖
- ・與852B、FR-803、FR-803B使用時  
如果噴嘴內側有螺釘(M3 x 5)，請取下此螺釘。
- ・單獨式噴嘴及沒有內側螺釘的噴嘴不能使用吸墊。
- ・BGA噴嘴可以使用吸墊。


2022.2  
MA01400XZ220221



702B、850B、852、FR-801、FR-802、FR-803、  
FR-803B、オプションノズル

#### 使用上のご注意

- ・702B、850B、FR-801、FR-802に使用する場合  
ノズルの内側にねじ(M3 x 5)がついている場合は、  
ねじを外さないでください。下図参照
- ・852、FR-803、FR-803Bに使用する場合  
ノズルの内側にねじ(M3 x 5)がついている場合は、  
ねじを外してください。
- ・シングルノズルと内側にねじ(M3 x 5)がついていないノズルは  
パッドは使用できません。
- ・BGA用ノズルはパッドは使用できます。



702B、850B、852、FR-801、FR-802、FR-803、FR-803B  
另購噴嘴

#### 使用上の注意


- ・與702B、850B、FR-801、FR-802使用時  
如果噴嘴內側有螺釘(M3 x 5)，請勿取下此螺釘。  
參照上圖
- ・與852B、FR-803、FR-803B使用時  
如果噴嘴內側有螺釘(M3 x 5)，請取下此螺釘。
- ・單獨式噴嘴及沒有內側螺釘的噴嘴不能使用吸墊。
- ・BGA噴嘴可以使用吸墊。

2022.2  
MA01400XZ220221

**702B, 850B, 850D, 852, FR-801, FR-802,  
FR-803, FR-803B, Optional nozzles**

**Precaution**

- Using the nozzle with 702B, 850B, 850D, FR-801, FR-802  
If the nozzle has an M3 x 5 inside screw, do not remove the screw. Refer to the drawing as under.
- Using the nozzle with 852, FR-803, FR-803B  
If the nozzle has an M3 x 5 inside screw, remove the screw.
- Some nozzles do not have an M3 x 5 inside screw.  
The vacuum pad for 852, FR-803, FR-803B cannot be used for these nozzle.
- The vacuum pad for 852, FR-803, FR-803B can be used with BGA nozzles.

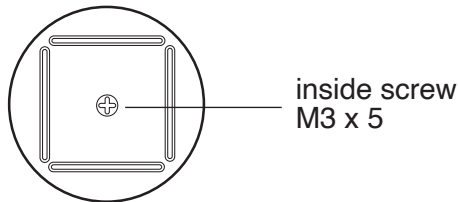


2022.2  
MA01400XZ220221

**702B, 850B, 850D, 852, FR-801, FR-802,  
FR-803, FR-803B, Optional nozzles**

**Precaution**

- Using the nozzle with 702B, 850B, 850D, FR-801, FR-802  
If the nozzle has an M3 x 5 inside screw, do not remove the screw. Refer to the drawing as under.
- Using the nozzle with 852, FR-803, FR-803B  
If the nozzle has an M3 x 5 inside screw, remove the screw.
- Some nozzles do not have an M3 x 5 inside screw.  
The vacuum pad for 852, FR-803, FR-803B cannot be used for these nozzle.
- The vacuum pad for 852, FR-803, FR-803B can be used with BGA nozzles.

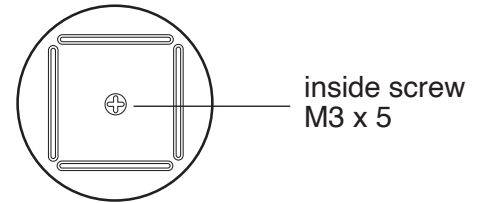


2022.2  
MA01400XZ220221

**702B, 850B, 850D, 852, FR-801, FR-802,  
FR-803, FR-803B, Optional nozzles**

**Precaution**

- Using the nozzle with 702B, 850B, 850D, FR-801, FR-802  
If the nozzle has an M3 x 5 inside screw, do not remove the screw. Refer to the drawing as under.
- Using the nozzle with 852, FR-803, FR-803B  
If the nozzle has an M3 x 5 inside screw, remove the screw.
- Some nozzles do not have an M3 x 5 inside screw.  
The vacuum pad for 852, FR-803, FR-803B cannot be used for these nozzle.
- The vacuum pad for 852, FR-803, FR-803B can be used with BGA nozzles.

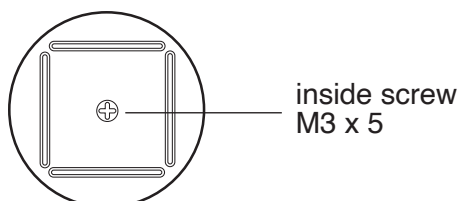


2022.2  
MA01400XZ220221

**702B, 850B, 850D, 852, FR-801, FR-802,  
FR-803, FR-803B, Optional nozzles**

**Precaution**

- Using the nozzle with 702B, 850B, 850D, FR-801, FR-802  
If the nozzle has an M3 x 5 inside screw, do not remove the screw. Refer to the drawing as under.
- Using the nozzle with 852, FR-803, FR-803B  
If the nozzle has an M3 x 5 inside screw, remove the screw.
- Some nozzles do not have an M3 x 5 inside screw.  
The vacuum pad for 852, FR-803, FR-803B cannot be used for these nozzle.
- The vacuum pad for 852, FR-803, FR-803B can be used with BGA nozzles.

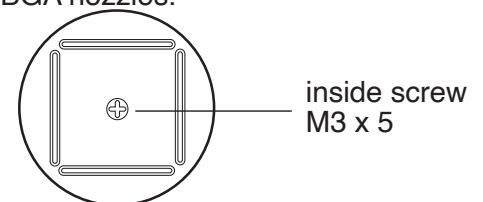

2022.2  
MA01400XZ220221