


No. B2608 P.W.B. for 853




CAUTION

Before replacing the 853 P.W.B., look for how the capacitor is soldered to the board that is being replaced. Attach the supplied tube to the lead of the capacitor, and solder between T1 and P1 on the soldered side of the new P.W.B. as illustrated below.

(as seen from the top)

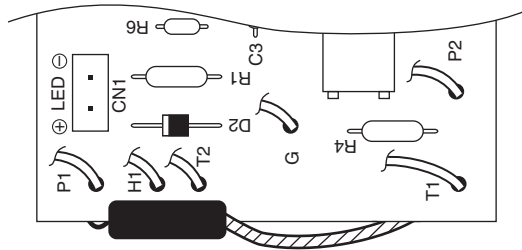

(as seen from the bottom)

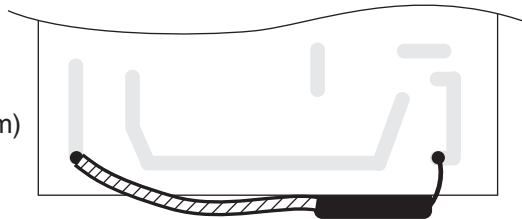


No. B2608 P.W.B. for 853



CAUTION

Before replacing the 853 P.W.B., look for how the capacitor is soldered to the board that is being replaced. Attach the supplied tube to the lead of the capacitor, and solder between T1 and P1 on the soldered side of the new P.W.B. as illustrated below.

(as seen from the top)

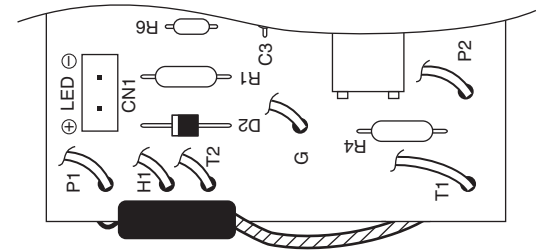

(as seen from the bottom)

