



Diagram illustrating the components and assembly points for the Philips SHB6500 speaker system:


- 1**: Main speaker unit.
- 2**: Control panel.
- 3**: Subwoofer unit.
- 4**: External speaker unit.
- 5**: Small rectangular component (likely a battery or sensor).
- 6**: Small square component (likely a battery or sensor).
- 7**: External tooth lock washer.
- 8**: External tooth lock washer.
- 9**: Power cable.
- 10**: Carabiner hook.
- 11**: Remote control.
- 12**: Audio cable.

Assembly points and labels:


- Sems screw M3 x 6(4) P2**: Points to the control panel (2).
- Sems screw M4 x 6(4) P3**: Points to the subwoofer unit (3).
- Sems screw M4 x 6(4) P2**: Points to the external speaker unit (4).
- External tooth lock washer**: Points to the external speaker unit (4).
- Nominal size 4**: Points to the external speaker unit (4).
- Truss screw M4 x 5(2)**: Points to the external speaker unit (4).
- Nominal size 4(4)**: Points to the external speaker unit (4).

Item No.	Part No.	Part Name	Specifications
①	B3530	Cover	W/membrane sheet
②	B3526	P.W.B.	
③	B3529	Chassis	With rubber feet
④	B3525	Transformer	100-120 V
	B3549	Transformer	220-240 V
⑤	B2748	Rubber foot	
⑥	B2852	Switch	

Item No.	Part No.	Part Name	Specifications
⑦	B5279	Inlet / 100 - 120 V	With varistor
	B5280	Inlet / 200 - 240 V	With varistor
⑧	B2468	Fuse	125 V-5 A
	B1258	Fuse	250 V-15 A
⑨	B2419	Power cord, 3 wired cord & American plug	120 V USA
	B2421	Power cord, 3 wired cord but no plug	
	B2422	Power cord, 3 wired cord & BS plug	220 V India
	B2424	Power cord, 3 wired cord & European plug	220 V KTL / 230 V CE
	B2425	Power cord, 3 wired cord & BS plug	230 V CE
	B2426	Power cord, 3 wired cord & Australian plug	
	B2436	Power cord, 3 wired cord & Chinese plug	220 V China
	B3508	Power cord, 3 wired cord & American plug	
	B3550	Power cord, 3 wired cord & SI plug	
⑩	B2388	Control card	
⑪	B2300	Heat resistant pad	
⑫	B3253	Connecting cable	

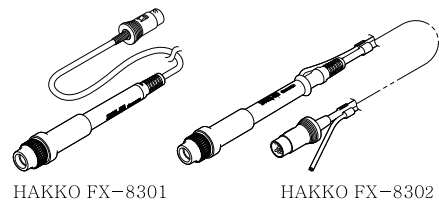

Part No.	Part Name	Specifications
FX8301-01	HAKKO FX-8301	150W (27V)
FX8302-01	HAKKO FX-8302	150W (27V)

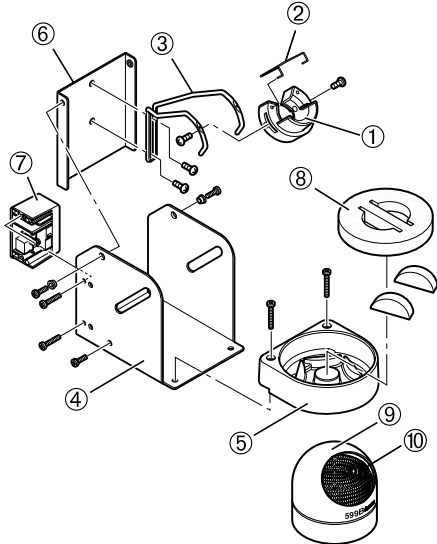

⚠ 경고
본 기기는 고온이 되므로 작업에는 충분한 주의를 기울여 주십시오. 특별히 지시가 있는 장소 이외는 반드시 전원코드를 뽑아 전원을 차단시켜 주십시오.

⚠ 주의
산화물을 제거하기 위해 줄질을
하지 마십시오.

경고
특별한 지시가 없는 한, 아래의 순서는 전원스위치를 끄고, 전원플러그를 뽑고 나서 실시해 주십시오.

The diagram illustrates a thermocouple assembly. It shows a cylindrical component labeled '히터' (Heater) and a smaller component labeled '센서' (Sensor). A '리드선' (Lead wire) is connected to the sensor. The assembly is shown in a cross-sectional view, revealing internal components and wiring.

A diagram of a circular component, possibly a lens or a sensor array. It features a central circle with six smaller circles arranged in a hexagonal pattern. The central circle is labeled with the number '6'. The outer circle has five points labeled with numbers: '3' at the top-left, '4' at the top-right, '7' at the bottom-right, '8' at the bottom-left, and '5' at the top. A small rectangular tab is attached to the bottom of the outer circle.

Item No.	Part No.	Part Name	Specifications
①-⑦,⑨,⑩	FH200-01	HAKKO FH-200	

Item No.	Part No.	Part Name	Specifications
①	B3001	Iron receptacle	With screws
②	B2791	Tip fixing spring	
③	B3248	Retaining clip	With screws
④	B3251	Iron holder base	With rubber feet
⑤	B3249	Cleaner base	With rubber feet
⑥	B3250	Stay	
⑦	B3252	Switch case assembly	
⑧	A1519	Cleaning sponge	
⑨	599B-02	Tip cleaner	With cleaning wire
⑩	599-029	Cleaning wire	


⚠ 경고
내부점검 또는 부품교환시 전원플러그는 반드시 뽑아 주십시오. 감전될 우려가 있습니다.

질문: 허더가 끊어져 있지 않습니까?
대처: 인두팁을 교환 해 주십시오.
 인두팁을 교환 해도 해결되지 않는 경우는
 구입하신 판매점에 문의 해 주시기 바랍니다.



Please access the web address below for other distributors.
<https://www.hakko.com>

5. 팁의 종류

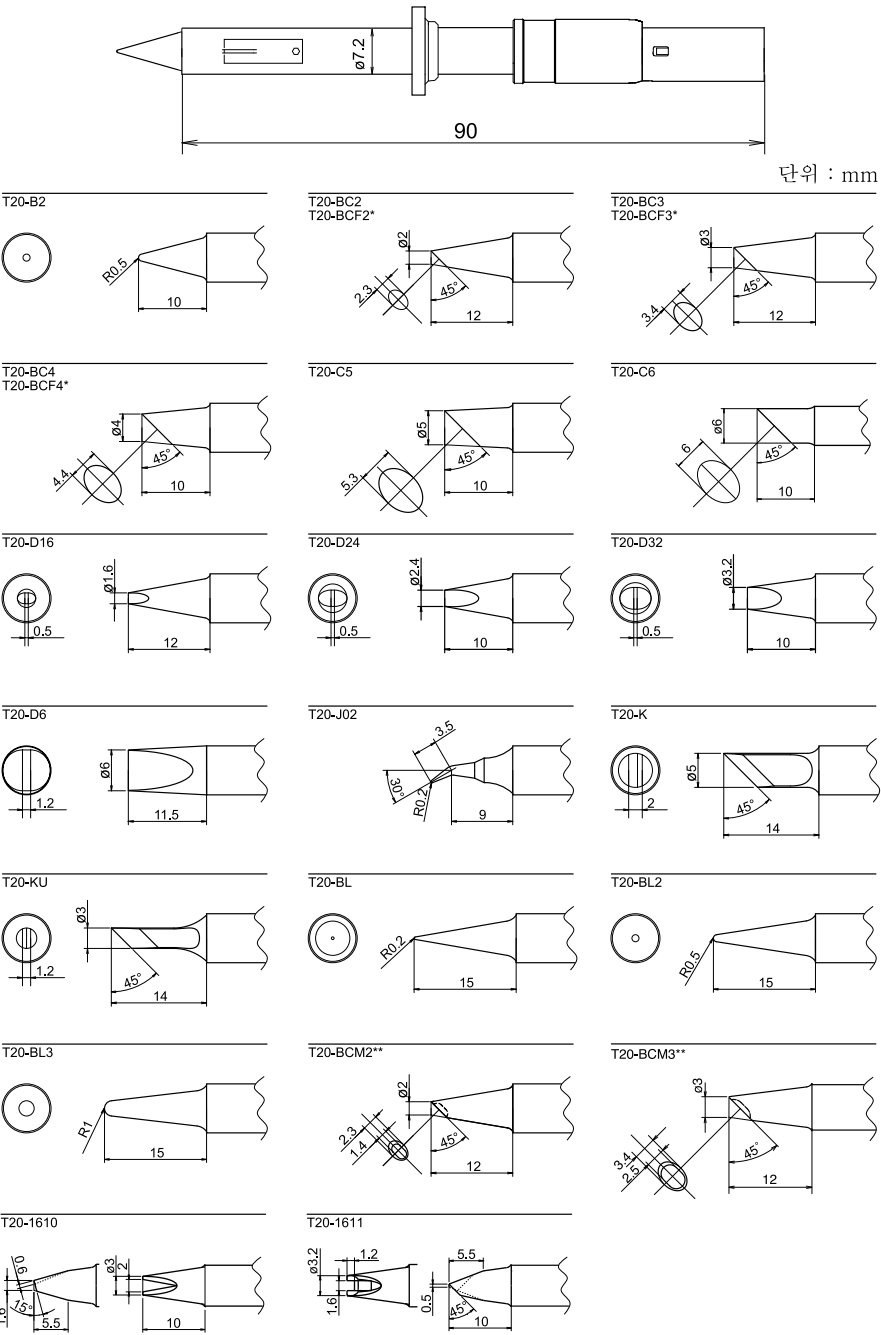

*Tinned on the soldering surface only.

MEMO