


## No.B3586

### 人体帯電測定プレート (ハッコー FG-450用)

#### 1. 取付方法

ハッコー FG-450本体のイオンバランスプレート取り付け部（ハッコーFG-450取扱説明書参照）に付属の専用ネジで人体帯電測定用プレートを取り付けます。

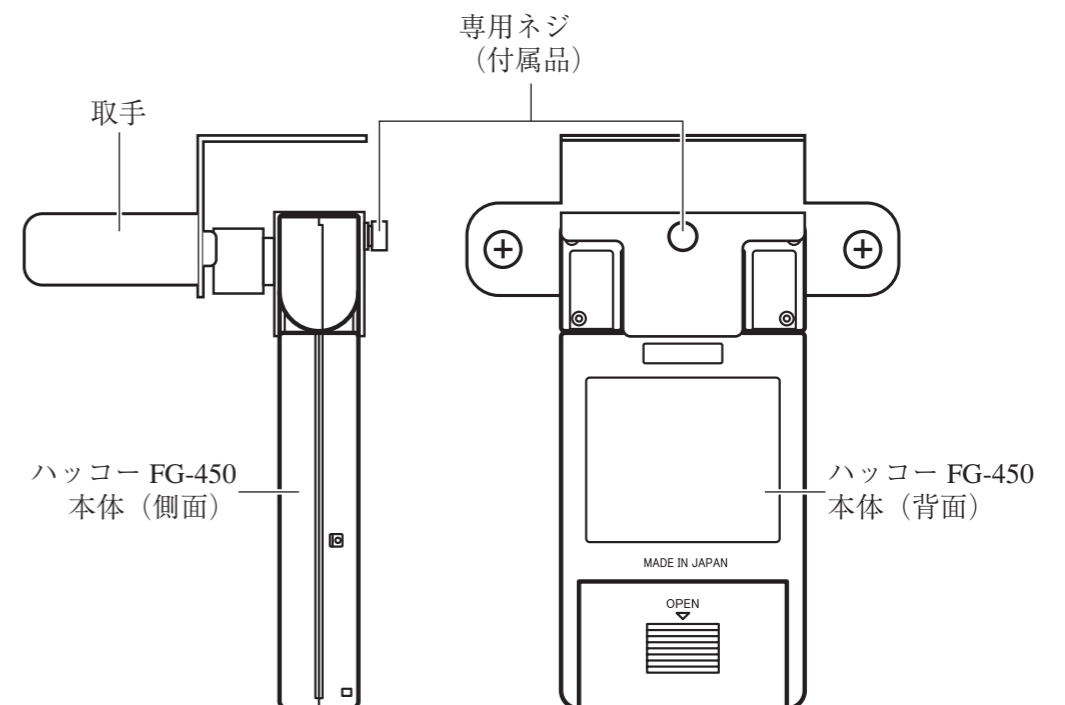

#### 2. 測定方法

- 2.1 プレート面（取手含む）をアースした状態で0 ADJを押し0点調整をします。
- 2.2 ハッコー FG-450の測定モードは通常測定モードまたはMAXモードを使用し測定します。
- 2.3 プレートの取手を持ち測定してください。

※ 正確な測定を必要とする場合にはハッコー FG-450本体のアース端子にアースを接続してください。

※ 測定モードや0点調整につきましてはハッコー FG-450取扱説明書を参照願います。

※ 各言語（日本語、英語、中国語、フランス語、ドイツ語、韓国語）の取扱説明書は以下のURL、HAKKO Document Portalからダウンロードしてご覧いただけます。  
(商品によっては設定の無い言語がありますが、ご了承ください)  
\* 各國語言(日語,英語,中文,法語,德語,韓語)的使用說明書可以通過以下網站的HAKKO Document Portal 下載參閱。  
(有一部分的產品沒有設定外語對應,請見諒)  
\* Instruction manual for the language, Japanese, English, Chinese, French, German and Korean can be downloaded from the following URL, HAKKO Document Portal.  
(Please note that some language may not be available depending on the product.)



<https://doc.hakko.com>

**HAKKO**  
白光株式会社  
<http://www.hakko.com/>  
〒556-0024 大阪市浪速区塩草2丁目4番5号  
TEL: (06) 6561-1574 (代) FAX: (06) 6568-0821

**HAKKO**  
HAKKO CORPORATION  
HEAD OFFICE  
TEL: +81-6-6561-3225 FAX: +81-6-6561-8466  
<http://www.hakko.com> E-mail: sales@hakko.com  
OVERSEAS AFFILIATES  
U.S.A.: AMERICAN HAKKO PRODUCTS, INC.  
TEL: (661) 294-0090 FAX: (661) 294-0096  
Toll Free (800) 86-HAKKO  
<http://www.hakkousa.com>  
HONG KONG: HAKKO DEVELOPMENT CO., LTD.  
TEL: 2811-5588 FAX: 2590-0217  
<http://www.hakko.com.hk>  
E-mail: info@hakko.com.hk  
SINGAPORE: HAKKO PRODUCTS PTE., LTD.  
TEL: 6748-2277 FAX: 6744-0033  
<http://www.hakko.com.sg>  
E-mail: sales@hakko.com.sg

Please access to the following address for the other Sales affiliates.  
<http://www.hakko.com>

**No.B3586**

測定人體帶電器具  
( HAKKO FG-450 用 )


**No.B3586**

Body Static Tester Plate Instruction manual  
(For HAKKO FG-450)

English 中文 日本文

**1. 安裝方法**

使用附屬專用螺絲配件將測定人體帶電器具安裝於HAKKO FG-450的離子平衡板安裝部上（請參照HAKKO FG-450 使用說明書）。

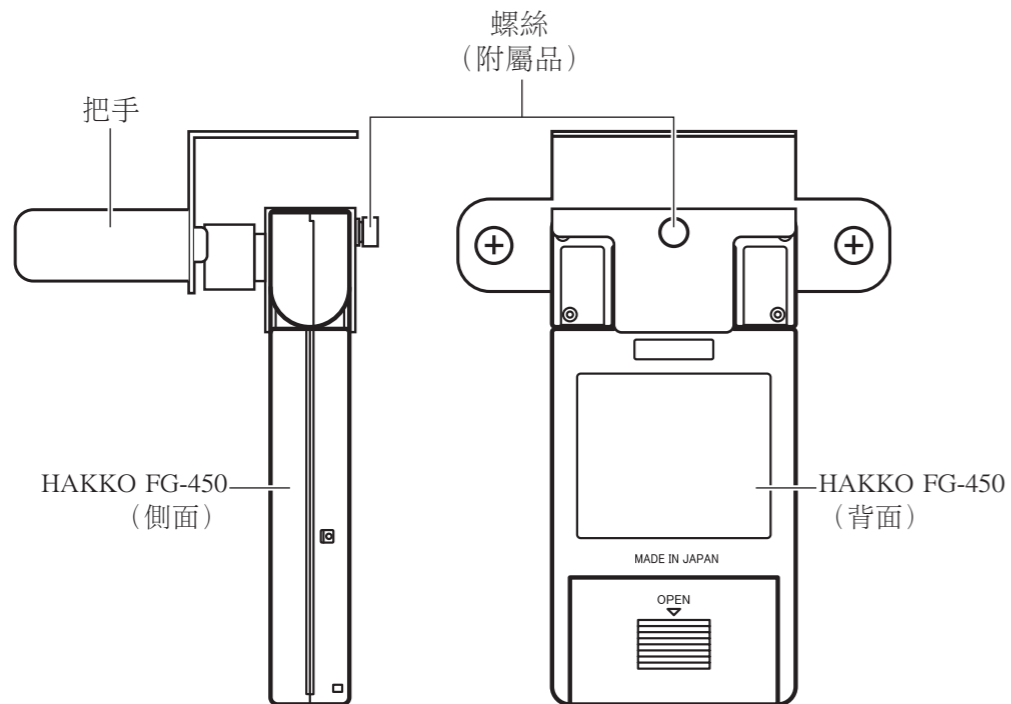

**2. 測定方法**


- 2.1 將測定人體帶電器具(包括把手)接地後，按下OADJ按鈕，調整為0點。
- 2.2 請將HAKKO FG-450的測定模式調整為通常測定模式或MAX模式來測定。
- 2.3 手持把手，進行測定。

\* 如果需要正確的測定時，請將HAKKO FG-450 機身上的接地端子接地。  
\* 關於測定模式和0點的調整，請參閱HAKKO FG-450的使用說明書。

日本文 中文 English

**1. How to attach**

Attach the Body Static Tester plate to the Ion balance plate attachment point by screw.

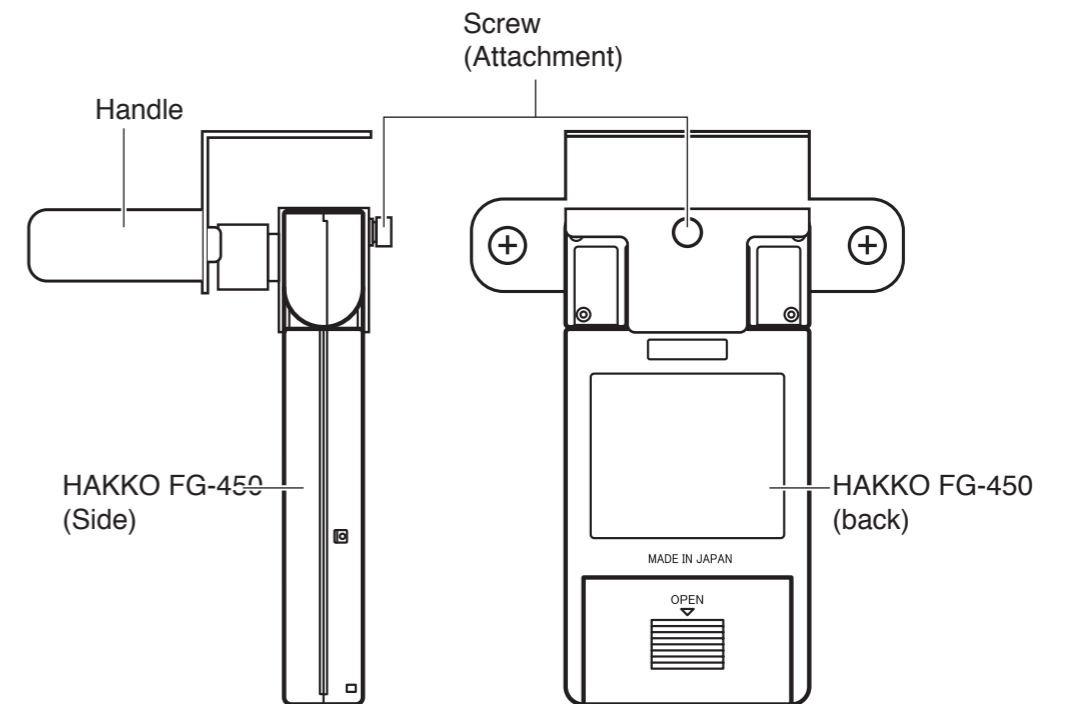

**2. How to measure**

- 2.1 Press the 0ADJ button with the plate (included handle) grounded.
- 2.2 In measurement mode for HAKKO FG-450, use the normal mode or MAX mode.
- 2.3 Measure static electricity with holding the handle of the plate.

\* If you need accurate measurement, the ground terminal must be grounded.  
\* Refer to HAKKO FG-450 Instruction manual about measurement mode and zero point adjustment.