

FIAKO FP-102

High-output, temperature controlled soldering station

Instruction Manual

Thank you for purchasing the FP-102 soldering station. This high-output, temperature controlled soldering station uses a composite tip, incorporating heater and sensor functions into one element. Several process control features unique to the FP-102 make it applicable to a broad range of soldering applications.

Please read this manual before operating the FP-102 . Keep this manual readily accessible for reference.

•

TABLE OF CONTENTS

1. PACKING LIST	1
2. SPECIFICATIONS	1
3. WARNINGS, CAUTIONS, NOTES AND EXAMPLES .	2
4. PART NAMES	3
5. INITIAL SETUP	3
6. OPERATION	5
7. PARAMETER SETTINGS	6
8. MAINTENANCE	7
9. ERROR MESSAGES	9
10. TROUBLE SHOOTING GUIDE	10
11. PARTS LIST	11
12. TIP STYLES	13
13. WIRING DIAGRAM	15

1. PACKING LIST

Please check to make sure that all items listed below are included in the FP-102 package.

FP-102 soldering station	Heat resistant pad
Control card Card chain FP-102 Soldering station	Iron holder
Tip tray Tip (n	not included) FM-2027 Connector assembly

2. SPECIFICATIONS

FP-102 Soldering Station

Power Consumption	75 W		
	The four segment lights on the front panel indicate the heat range selected for the FP-102 (6.5 = \sim 650°F. [343°C]; 7.0 = \sim 700°F. [371°C]; 7.5 = \sim 750°F. [399°C]; 8.0 = \sim 800°F. [427°C]).		
Temperature Stability	±9°F (±5°C) at idle temperature		

Station

Output	24 V
Dimensions(W \times H \times D)	$120 \times 93 \times 140 \text{ mm } (4.7 \times 3.7 \times 5.5 \text{ in.})$
Weight (w/o cord)	1,400 g (3.1 lb.)

Soldering Iron

Power Consumption	70 W (24 V)		
Tip to Ground Resistance	< 2 Ω		
Tip to Ground Potential	< 2 mV		
Total Length (w/o cord)	188 mm (7.4 in.) with 2.4D tip		
Weight (w/o cord)	30 g (0.067 lb./1.07 oz.) with 2.4D tip		
Cord	1.2 m (4 ft)		

NOTE

This product is protected against electrostatic discharge.

This product meets China RoHS requirements. (See the last page.)

Specifications and design are subject to change without notice.

■ Electrostatic Protection

This product includes such features as electrically conductive plastic parts and grounding of the handpiece and station as measures to protect the device to be soldered from the effects of static electricity. Be sure to observe the following instructions:

- 1. The handle and other plastic parts are not insulators, they are conductors. When replacing parts or repairing, take sufficient care not to expose live electrical parts or damage insulation materials.
- 2. Be sure to ground the unit during use.

3. WARNINGS, CAUTIONS, NOTES AND EXAMPLES

Warnings, cautions and notes are placed at critical points in this manual to direct the operator's attention to significant items. They are defined as follows:

MARNING: Failure to comply with a WARNING may result in serious injury or

CAUTION: Failure to comply with a CAUTION may result in injury to the operator, or damage to the items involved. (Two examples are given

below.)

NOTE: A NOTE indicates a procedure or point that is important to the process be-

ing described.

EXAMPLE: An EXAMPLE is given to demonstrate a particular procedure, point or

process.



When power is ON, the tip will be HOT (between 300-450°C. [572-840°F.]) To avoid injury or damage to personnel and items in the work area, observe the following:


- Do not touch the tip or the metal parts near the tip.
- Do not allow the tip to come close to, or touch, flammable materials.
- Inform others in the area that the unit is hot and should not be touched.
- Turn the power off when not in use, or left unattended.
- Turn the power off when connecting the FM-2027 or storing the FP-102.
- Do not remove or damage the bar code sticker.



To prevent accidents or damage to the FP-102, be sure to observe the following:

- Do not use the FP-102 for applications other than soldering.
- Do not allow the FP-102 to become wet, or use it with wet hands.
- Do not modify the FP-102.
- Use only genuine Hakko replacement parts.
- Do not bend or damage the control card. If the card does become damaged, do not force the card into the station slot.
- Do not strike the iron against hard objects to remove excess solder. This may damage the iron
- Remove power and iron cords by holding the plug, not the wires.
- Be sure the work area is well ventilated. Soldering produces smoke.

4. PART NAMES

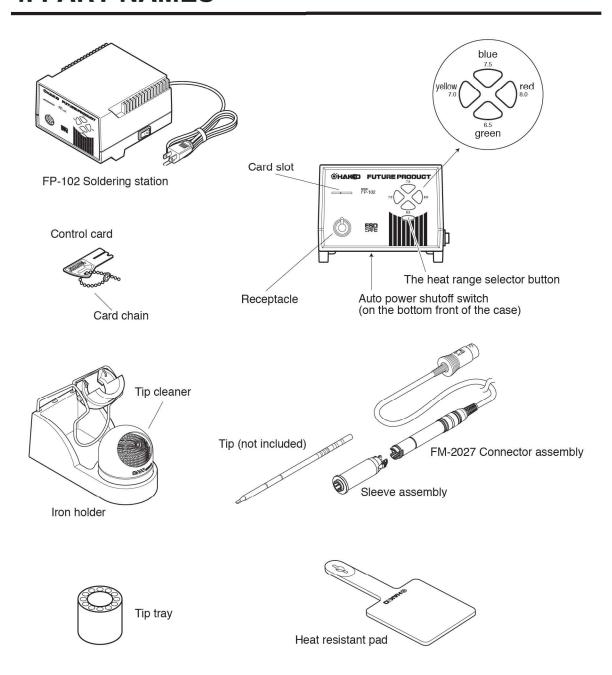


5. INITIAL SETUP

Iron holder



Connector cord


Pass the connector cord through the hole in the heat resistant pad.

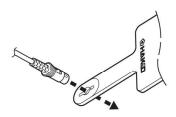

Soldering station


- 1. Insert the connector cord into the receptacle at the front of the station.
- 2. Plug the power cord into a grounded wall socket. The FP-102 is protected against electrostatic discharge and must be grounded for full efficiency.

⚠CAUTION:
Be sure to turn off the power switch before connecting or disconnecting the soldering iron. Failure to do so may damage the P.W.B.

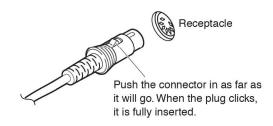

Tip tray

Place spare tips in the tip tray.

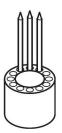

6. OPERATION

OPERATION

- 1. Turn the power switch ON.
- A heat range indicator (one of the four segment buttons, indicating the selected range) will blink.
- When the set temperature is reached, the buzzer alarm sounds indicating it is ready for use. The indicator lamp remains on steadily.

Control card

Changing the heat range

1. Insert the control card into the slot in the front of the unit.

As previously noted, the four segment lights on the front panel indicate the heat range selected for the FP-102 (6.5= ~650 °F. [343°C]; 7.0= ~700°F. [371°C]; 7.5= ~750°F. [399°C]; 8.0= ~800°F. [427¡C]. The ranges are approximate values only; the actual tip temperature depends upon tip geometry and mass. These lights are *indicators*; one must press the "heat range" button, located below the indicators, to change range.

- Press the heat range selector button. Each time this button is pressed a different heat range indicator lamp will light. It will blink slowly until the set range is reached; once at temperature, it will remain on steadily.
- Removing the card.
 When the station is on and the control card is in the station, the temperature can be changed any time.
- When the alarm sounds and the heat range indicator lamp starts lighting, the station is ready for use.


NOTE:

When not in use, place the soldering iron to the iron holder.

Each FP-102 comes with a small card, which inserts into the Card slot on the front of the unit. This card is used when changing heat *ranges*. Any FP-102 card can be used with any FP-102 soldering station.

∴CAUTION:

The control card must be inserted into the card slot in the correct direction for data to be entered.

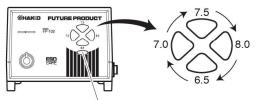

The heat range selector button

When power is switched off the selected heat range is stored in memory.

Using the iron holder

Remove any excess solder from the tip by thrusting the tip into the cleaning wire.

(Do not wipe the tip against the wire. This may cause molten solder to spatter.)

When the wire become dirty or loaded with solder, turn the wire until a clean surface is presented.

When changing the cleaning wire, lift the case top vertically to prevent solder debris from falling out.



Replacing the tip

ACAUTION:

The tip may be hot. Avoid holding the hot tip for a long time even if using the heat-resistant pad. Otherwise burns may result.

Removing the tip:

 Holding down the lock release buttons in the sleeve assembly, pull out the tip together with the sleeve assembly from the connector.

CAUTION:

Be sure to keep the lock release buttons held down while pulling out the sleeve assembly. Failure to do so will damage the locking mechanism.

 Holding the front end of the sleeve, pull out the tip.

Inserting the tip:

 Holding the front end of the tip, insert it into the sleeve assembly.


∴CAUTION:

Insert the tip into the sleeve assembly until it clicks into place. When you hear it clicks, avoid forcing the tip into the sleeve assembly.

- Insert the "ID" end of the tip into the process gate until the buzzer sounds so that the tip ID can be read out.
- Insert the tip securely into the connector.


NOTE:

Improper insertion of the tip will cause $5-\xi$ to appear on the display.

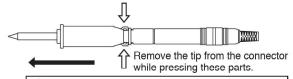


CAUTION:

Be sure to pull out the tip only after separating the sleeve assembly from the connector. Otherwise, the sleeve assembly may fall down and break.

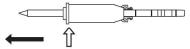

Hold the front part of the sleeve assembly to remove the tip.

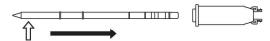

Hold this part to insert the tip into the sleeve assembly.

CAUTION:

When holding the head of the tip, there is a danger of burn. Be sure to use the heat-resistant pad.



Hold this part to insert the tip into the connector.

7. PARAMETER SETTINGS

Auto power shutoff

This is an optional setting. When it is activated and the soldering iron is not used for 30 minutes, the power to the heating element is shut off automatically, the alarm will sound three times and the selected heat range lamp will light slowly. When the temperature decreases to 100°C/212°F, the heat range indicator lamps light in a slow clockwise sequence. If the station is left in this mode, the 'alarm'

will continue to sound every thirty minutes. To resume soldering, cycle the power switch OFF, then ON. The power will be turned on automatically if the heat range selector button is pressed before the temperature decreases to 100°C/212°F.

The auto power shutoff switch is on the bottom front of the case. To turn this function ON ,set the switch to the 'I' position. (OFF is reverse.)

8. MAINTENANCE

Tip maintenance

1. Tip temperature

2. Cleaning

- 3. After use
- 4. When the unit is not being used and the auto power shutoff is not active.
- 5. Inspecting and cleaning the tip

High temperatures shorten tip life and may cause thermal shock to components. Always use the lowest possible temperature when soldering. The excellent thermal recovery characteristics of the FP-102 ensure effective soldering at low temperatures.

Always clean the soldering tip before use to remove any residual solder or flux adhering to it. Use the 599B tip cleaner (provided with the FP-102) or use a clean and moist cleaning sponge part no. A1519. Contaminants on the tip have many deleterious effects, including reduced heat conductivity, which contribute to poor soldering performance.

Always clean the tip and coat it with fresh solder after use. This guards against oxidation.

Never allow the unit to idle at a high temperature for extended periods. This will allow the tip to become oxidized. Turn the power switch OFF. If it is to be out of service for several hours, it is advisable to pull the power plug as well.

This procedure, if followed daily, will materially add to tip life.

- a. Set the heat range to 6.5.
- When the temperature stabilizes, clean the tip (see 2, above) and check the condition of the tip. If the tip is badly worn or deformed, replace it.
- c. If the solder plated part of the tip is covered with black oxide, apply fresh solder, containing flux, and clean the tip again. Repeat until all the oxide is removed, then coat the tip with fresh solder.

♠CAUTION:

NEVER file the tip to remove oxides!

d. Turn the power OFF and remove the tip. Set the tip aside to cool.

Checking Procedure

MARNING:

Unless otherwise directed, carry out these procedures with the power switch OFF and the power UNPLUGGED

■ Check for a broken heater or sensor

1. Check for a broken heater or sensor

Measure the resistance across this position.



Verify the electrical integrity of the heater and sensor.


Measure the resistance of the heater and sensor while at room temperature (15 to 25°C; 59 to 77°F). It should be $8\Omega \pm 10\%$. If the resistance exceeds these limits, replace the tip.

■ Check the grounding line



- Unplug the connection cord from the station.
- 2. Measure the resistance value between Pin 2 and the tip.
- 3. If the value exceeds 2Ω (at room temperature), perform the tip maintenance described on P.7. If the value still does not decrease, check the connection cord for breakage.

■ Checking the connection cord for breakage

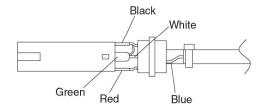


- Remove the soldering tip and the sleeve assembly.
- 2. Turn the front piece of the FM-2027 clockwise and remove the cover.
- Measure the resistance values between the connector and the lead wires at the socket as follows:

Pin 1 - Red Pin 2 - Green Pin 3 - Black Pin 5 - White


If any value exceeds 0Ω , replace the FM-2027.

9. ERROR MESSAGES

System Error

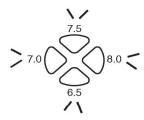


Sensor Error

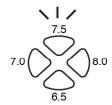

Heater terminal short circuit error

Soldering iron error

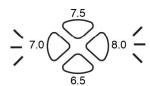

When the power is turned on, the system automatically checks its memory and the stored program. If a problem is found, all the heat range indicator lamps will light and the tip will not heat.

To reset the system error, turn the power switch off and then turn it on again while depressing the heat range selector button.

If the problem persists, consult with the local distributor or sales agency.

When there is the possibility that a failure has occurred in the sensor or heater (including the sensor circuit), the heat range indicator lamp will blink rapidly and the heater is shut down.

NOTE:

"Sensor error" also occurs if the tip is not inserted properly.

All the heat range indicator lamps will blink, and the alarm will sound continuously. Possible causes are: the tip is inserted the wrong way, an incompatible tip is inserted, or a foreign object is in the connector.

The *yellow* and *red* heat range indicator lamps will blink if the connector cord is not attached to the station OR the wrong soldering iron is connected.

∴CAUTION:

Do not connect the FM-2022 or FM-2023 with the FP-102.

10. TROUBLE SHOOTING GUIDE

- Before opening the FP-102, or replacing parts, be sure to disconnect the power plug. Failure to do so may result in electric shock.
- The unit does not operate when the power switch is turned on.

CHECK: Is the plug disconnected?

ACTION : Connect it.

- The tip does not heat up.
 - "Sensor error" 7.0 (See is dis-

CHECK: Is the tip inserted properly? ACTION : Insert the tip completely.

CHECK: Is the connection cord and/or the heater/sensor broken?

ACTION: See the appropriate section of this manual regarding how to check the connection cord and/or the heater/sensor for breakage.

 Solder does not wet the tip.

• The tip temperature is too high.

The tip temperature is

 The soldering iron error, yellow and red lamp blink.

too low.

Heater terminal short circuit error = 7.0 0 10 10 15 displayed

CHECK: Is the tip contaminated with oxide?

ACTION: Remove the oxide (see "Tip maintenance" on P. 7).

CHECK: Is the connection cord broken?

ACTION: See "Checking the connection cord for breakage" on P.8.

CHECK: Is the tip contaminated with oxide?

ACTION: Remove the oxide (see "Tip maintenance" on P. 7).


CHECK: Is the wrong soldering iron connected? Or the FM-2027 plug disconnected?


ACTION: Turn off the power switch, re-connect the FM-2027 soldering iron, then turn on the power switch.


CHECK: Is the tip for FM-2027?

ACTION: Turn the power switch OFF and insert genuine FM-2027 tip. Turn the power switch ON.


11. PARTS LIST

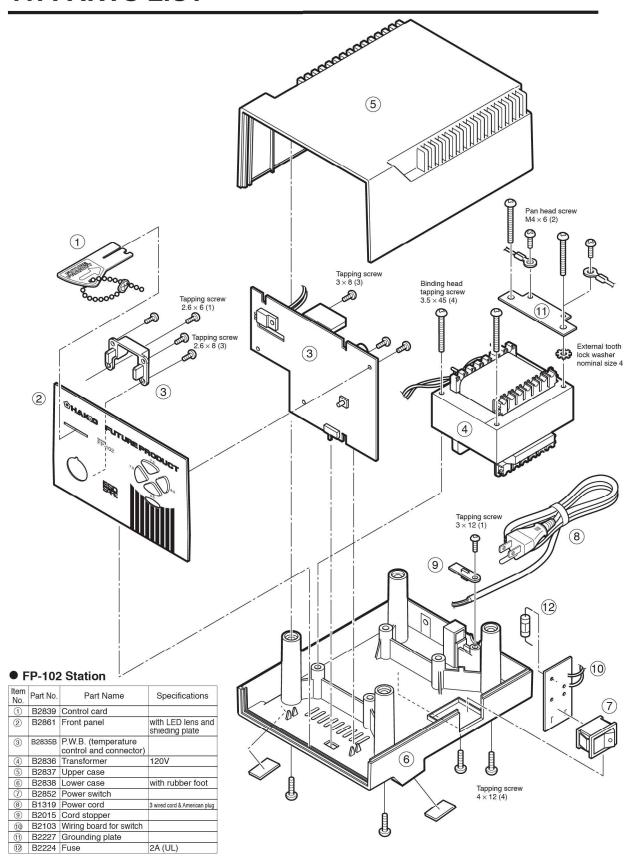

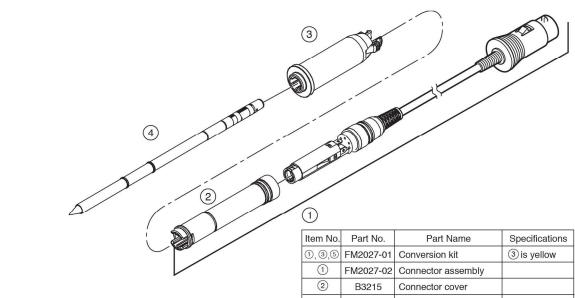

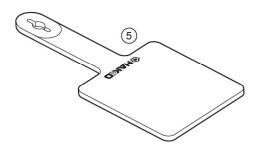

Item No.	Part No.	Part Name	Specifications	
1,3,5	FM2027-01	Conversion kit	③ is yellow	
1	FM2027-02	Connector assembly		
2	B3215	Connector cover		
	B3216	Sleeve assembly	Yellow	
3	B3217	Sleeve assembly	Orange	
	B3218	Sleeve assembly	Blue	
	B3219	Sleeve assembly	Green	
4		Tip	See section '12. HP STYLES'	
(5)	B2300	Heat resistant pad		

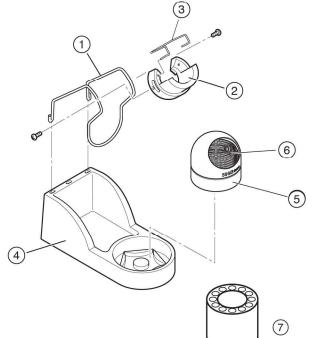


• Iron Holder


Item No.	Part No.	Part Name	Specifications		
1 ~6	FH100-01	Iron holder			

• Iron Holder Parts


Item No. Part No.		Part Name	Specifications
1	B3000	Holder for iron receptacle	
2	B3001	Iron receptacle	With screw
3	B2791	Retaining clip	
4	B2999	Iron holder base	With rubber feet
(5)	599B-02	Tip cleaner	
6	599-029	Cleaning wire	
7	7 B2756 Tip tray		

12. TIP STYLES

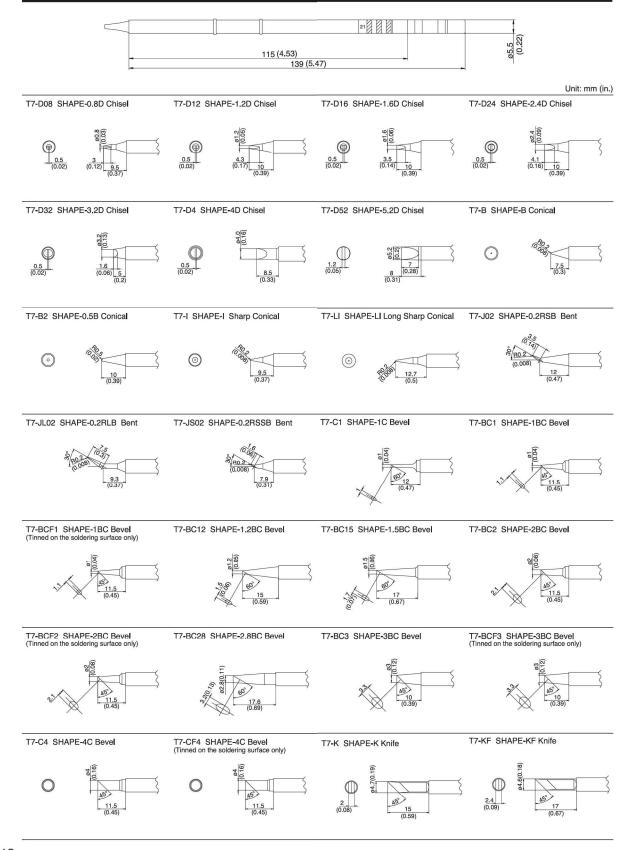

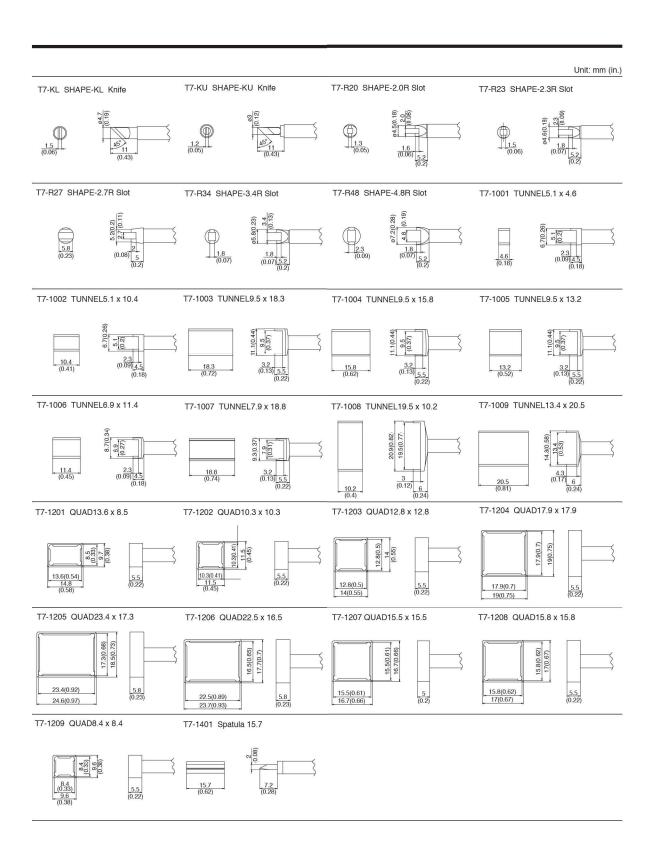

13. WIRING DIAGRAM

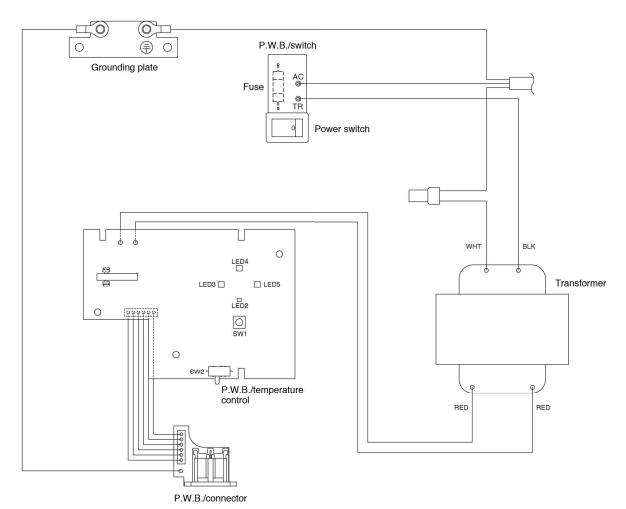

產品中有毒有害物質或元素的名稱及含量

	.f		有毒有害	言物質或元	素	
部件名稱	鉛(Pb)	汞(Hg)	鎘(Cd)	六價鉻 (Cr(VI))	多溴聯苯 (PBB)	多溴 _一 苯醚 (PBDE)
焊鐵部	×	0	0	0	0	0

- ○:表示該有毒有害物質在該部件所有均質材料中的含量均在SJ/T 11363-2006 標準規定的限量要求以下。
- ※: 表示該有毒有害物質至少在該部件的某一均質材料中的含量超出 SJ/T 11363-2006 標準規定的限量要求。



HAKKO CORPORATION

HEAD OFFICE

4-5, SHIOKUSA 2-CHOME, NANIWA-KU, OSAKA, 556-0024 JAPAN TEL:+81-6-6561-3225 FAX:+81-6-6561-8466 http://www.hakko.com

AMERICAN HAKKO PRODUCTS, INC.

28920 N. AVENUE WILLIAMS VALENCIA CA 91355, U.S.A. TEL: (661) 294-0090 FAX: (661) 294-0096 Toll Free (800)88-HAKKO www.hakkousa.com

Copyright © 2005 HAKKO Corporation. All Rights Reserved.